



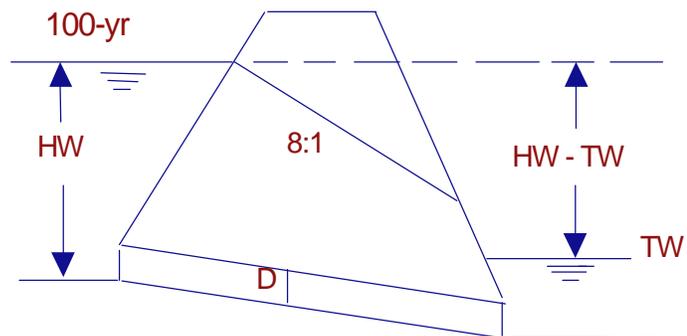

## Roadway Embankment Design Criteria

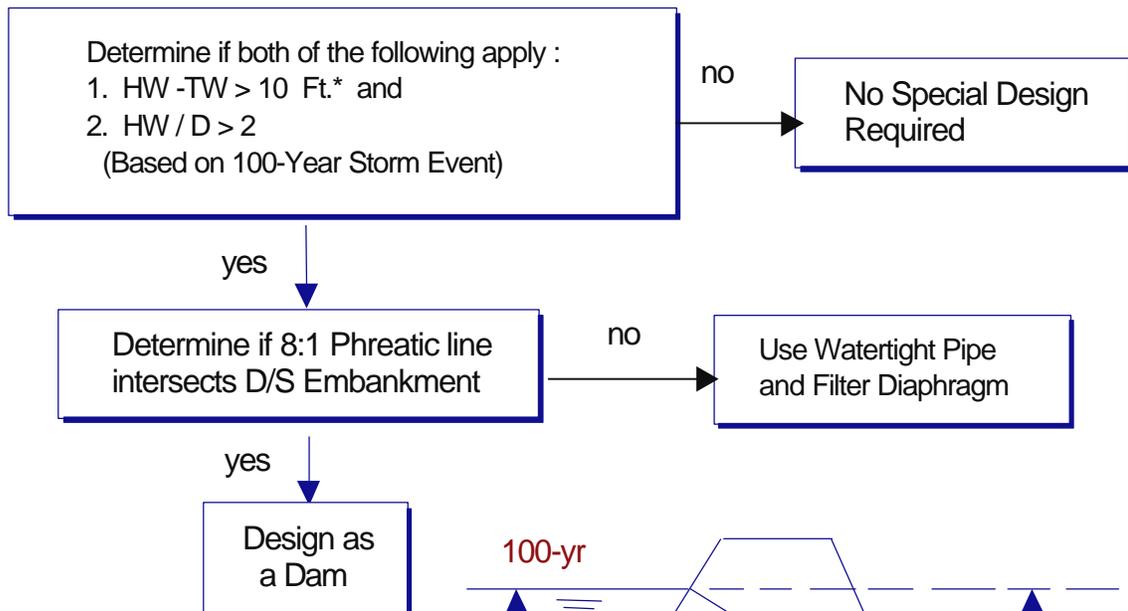

\* Use HW when TW is below the inlet invert elevation.