



September 8, 2015

Maryland Department of the Environment
1800 Washington Blvd.
Baltimore MD 21230
Attention: Ms. Jeannette DeBartolomeo, Case Manager

**RE: Response to Request for Ozone Pilot Testing
and Full System Install Information**
Calvert Citgo (Former Alger Country Store)
2802 Northeast Road (Ginski Residence)
2794 Northeast Road (O'Brien Residence)
North East, Maryland 21901
Facility No. 5678
REPSG Project Reference No. 005977.130.01

Dear Ms. DeBartolomeo,

Following correspondence between the MDE and REPSG on July 21, 2015, REPSG presents this combination Ozone Pilot Testing Workplan and Full-Scale System Information Letter to the MDE for review and consideration.

1.0 BACKGROUND/INTRODUCTION

The Site has operated as a retail petroleum station since the late 1950's and it continues to be operated in that capacity. Currently the Site contains a total of three (3) USTs: one (1) 8,000-gallon steel-constructed UST containing gasoline; one (1) 12,000-gallon steel-constructed UST containing gasoline; and one (1) 12,000-gallon, steel-constructed compartmentalized UST containing diesel fuel and kerosene. All three (3) USTs were installed at the Site in February 1997, following the removal and disposal of the previous gasoline/diesel tank system.

The Site has been under investigation in some capacity since at least 1991, with an ongoing groundwater monitoring program and drinking water monitoring program in progress under REPSG's oversight at the Site, as well as an off-Site drinking water monitoring program, since 2008.

In March 2014 shallow and intermediate groundwater zone monitoring wells were installed at the off-Site residence properties proposed within the May 2013 Corrective Action Plan (CAP) and July 5, 2013 CAP Addendum, approved by the MDE October 1, 2013. Prior to the

implementation of these measures, additional details for these measures, as well as additional proposed measures, were presented by REPSG in the “Proposed Interim Remedial Measures” (PIRM) correspondence dated February 13, 2014. The PIRM requested that a deep zone investigation be completed at the residences located off-Site to establish a viable potable water zone in an effort to bring immediate relief to the residences.

A meeting between personnel from the MDE, REPSG, and Responsible Parties was held at the MDE on October 6, 2014 to discuss the contents of the CAP and the PIRM, leading to the submission of a Revised Scope of Work (SOW) for the Site on November 4, 2014. This Revised SOW detailed the proposed deep zone monitoring well installation initially presented within the PIRM, as well as a downhole geophysical borehole survey of the off-Site potable well located at 2802 Northeast Road. This Revised SOW was approved in part by the MDE in correspondence dated February 10, 2015.

In their February 2015 correspondence, the MDE indicated that the completion of “Phase I” of the Revised SOW (the downhole geophysical borehole survey of the off-Site potable well located at 2802 Northeast Road) would be required first, prior to the approval of “Phase II” of the Revised SOW (the proposed deep zone monitoring well). In this correspondence the MDE also indicated that discrete-zone (commonly called “packer testing”) of the off-Site potable well at 2802 Northeast Road would also be required.

Phase I of the Revised SOW, which included the geophysical borehole survey and discrete-zone “packer testing” of the off-Site potable well located at 2802 Northeast Road took place from April 21-24, 2015. The results of this work, which were presented in a June 8, 2015 Supplemental Investigation Report, did not indicate a distinct water bearing zone within the 0-250 foot depth range which would provide the combination of water quality and water yield to serve as a replacement drinking water supply well. Therefore, the installation of a new deep zone replacement drinking water well at the residence with a more limited open depth system was deemed unlikely to be sufficient in providing immediate relief to the residents via the supply of a clean, viable drinking water source. The Supplemental Investigation Report concluded that a reassessment of current groundwater conditions and remedial needs at the Site be conducted in conjunction with the MDE, and that a determination as to the most efficient corrective action plan for cleanup of the groundwater contaminate plume at the Site be made and subsequently implemented.

On July 21, 2015 REPSG corresponded with the MDE following the MDE’s review of this Supplemental Investigation Report. During this correspondence, the use of Ozone water treatment technology was presented as a potential remedy to the ongoing tert-butyl alcohol (TBA) concentrations present in the off-Site residential post-carbon filtration drinking water samples collected each month.

2.0 GENERAL DESCRIPTION

A review conducted by REPSG of currently available technology has identified the potential for the implementation of an ozone treatment system in order to address the ongoing elevated concentrations of TBA at the residences, thereby providing relief to the residences for their

drinking water concerns. This system would be installed and run in conjunction with the currently in-place carbon filtration systems at each residence.

Ozone (O₃) is a known oxidizing agent for both inorganic and organic compounds, and is also known to act as a bacterial disinfectant. The only by-product of an ozone treatment system is oxygen (O₂), and ozone is not known to alter the taste or color of treated water.

Ozone treatment systems consist of four basic stages/components: a gas feed/air preparation system, an ozone generator, an ozone contactor/injector, and an off-gas venting or destruction system. The initial stages draw air from the surrounding environment (which consists of 20% oxygen), or from an attached oxygen supply system, into the system, and prepares the air with an air drying system. The prepared air is then passed through the corona discharge (CD)-type ozone generator, where it is exposed to multiple electrical discharges. This results in the creation of ozone. The ozone is then injected into the water within a contact tank system which provides contact time (CT) to oxidize inorganic and organic compounds present within the water, resulting in a decrease in concentrations of inorganic and organic compounds of concern. Off-gas venting occurs as the final stage in order to purge ozone from the environment safely.

2.1 TASK 1: OZONE TREATMENT PILOT TESTING

In order to assess the potential for the implementation of a full-scale ozone treatment system at both off-Site residences, REPSG will provide labor, equipment, and materials to set up a pilot-test ozone treatment system at the occupied off-Site residential property (O'Brien's). The occupied home was selected due to the current elevated and steady state concentrations of TBA present within post-carbon drinking water samples collected monthly.

This pilot-test, which will take place over the course of one (1) 8-hour work day will include a scalable system, allowing for variations in treatment intensity and contact time in order to determine the most-effective ozone treatment parameters, including generation rates, vapor concentrations, and contact times necessary in order to significantly reduce the concentrations of TBA to levels considered acceptable by the MDE at each off-Site residence. Contact time will be increased in four progressive steps of one to two hours duration during the course of the pilot test. Increase in contact will be effected by varying the ozone generation rate and/or air flow rate into the contact tank. At the conclusion of each treatment intensity step, water samples will be collected from points at the influent and effluent of the ozone treatment system.

REPSG has consulted with vendors, and has made a preliminary selection of usage of a complete turnkey skid-mounted Point-of-Entry ozone contacting system, for the pilot test, such as the POE10 model manufactured by Clearwater Tech, Inc., or its equivalent.

An REPSG technician will be on-Site to monitor the progress of the pilot testing, and to collect ongoing drinking water samples from the residences in order to assess the viability of the ozone system. These samples will be submitted for analysis of the full-suite Volatile Organic Compounds VOC's (including BTEX, Naphthalene, and MTBE) using Method 524.2B. Up to four (4) sets of drinking water samples are anticipated to be collected at this residence during the course of this pilot test.

REPSG will dispose of any development water, estimated up to 250 gallons into 55 gallon drums and dispose of it via a licensed facility; assuming that groundwater is non RCRA/non-DOT regulated waste.

A letter report will be produced following the completion of the pilot test that will detail the methods, results, and conclusions of the investigation.

2.2 TASK 2: OZONE TREATMENT FULL-SCALE SYSTEM INSTALL

If, following the completion of the pilot testing it is determined that the use of ozone treatment technology at the off-Site residences will be effective at decreasing concentrations of TBA at the off-Site residential properties to concentrations below the MDE treatment goals for TBA in drinking water, then following approval of the MDE, the client, and each off-Site residential owners, a permanently installed ozone treatment system will be installed at each off-Site residence.

While the specifications of the ozone treatment system required for the most effective treatment of TBA at both off-Site residences cannot be determined until after the completion of the pilot test, based upon available literature on various ozone treatment systems (see *attachments*), a skid-mounted ozone treatment system installed in the basement of each off-Site residence is likely to meet the compound concentration reduction needs of both off-Site residences.

These skid-mounted ozone treatment systems are typically installed between the well head and the pressure tank, following any already in place filtration systems (such as the currently in-place carbon filtration system present in each off-Site residential basement). The current carbon filtration system in place at each residence includes three carbon filtration tanks installed within the basement of each residence. The ozone treatment system would therefore be installed following the third (and final) carbon filtration tank, but prior to the pressure tank included as part of the drinking water system, within the basement of each residence. The ozone system will be sized to match the rated drawdown of the pressure tank and discharge rates of the well pump.

The basement location would also meet the requirements indicated within available literature and systems manuals stating that ozone treatment equipment should be kept sheltered from direct rain or dusty conditions, and within a climate controlled environment so that the systems are not exposed to freezing temperatures or temperatures in excess of 100°F. In addition, these systems will require adequate ventilation, which can be achieved via the installation of a small (less than 1 inch) off-gas vent system (typically supplied with skid-mounted ozone treatment units) to the exterior of the home.

These skid-mounted ozone treatment units are typically self-contained “turnkey” units, with an ozone generator, injector, contact tank, booster pumps, vacuum breaks, back-flow prevention, and gas vents all included within the system setup. Some systems also include a time delay option, allowing for an adjustable ozone dosage control. Skid-mounted units typically are 6 feet or less in height, with a footprint of approximately 2.5 square feet, and weigh approximately

Maryland Department of the Environment
September 8, 2015

Response to Request for Ozone Pilot Test
and Full Scale System Install Information
Calvert Citgo (Former Alger Country Store)
2815 Northeast Road
North East, Cecil County, MD
REPSG Project Reference No: 005977.130.01

200 pounds. These units could therefore easily be installed within the basements of both off-Site residences.

Skid-mounted ozone treatment units typically utilized for the treatment of residential well water typically utilize a standard 110V/120V or 230V/240V/ household electrical supply. With a typical current draw of 4.8 to 14.2 amps, or the electrical usage equivalent to an 1,100 to 1,700 watt appliance, during periods which the system is in use for treatment. A determination as to the exact size and amp/wattage of the ozone treatment unit necessary for the off-Site residences will be made following the completion of the proposed pilot testing program.

As ozone is generated on-Site within the self-contained ozone system units, no transportation or storage of ozone is required for operation. Therefore, maintenance of these self-contained skid-mounted ozone treatment units requires only typical equipment/appliance care and maintenance for maximum efficacy. This care includes regular assessment of the equipment to make sure that all parts are fully functional.

Closure

Thank you for review of this information, and consideration of this proposed course. If you have any questions or concerns, please do not hesitate to contact our office at 215-729-3220.

Sincerely,



Kevin McAllister, P.G.
Professional Geologist



Suzanne Shourds
Project Manager



Brenda MacPhail Kellogg
Senior Project Manager

React Environmental Professional Services Group, Inc

Enclosures

cc: *Chris Haab, Country Stores, Inc.*
Prag Patel, Calvert Citgo Stores
Susan Bull, Case Manager, MDE

OZONE

A natural sanitizer for your Well Water



We've made choosing your water system easy with the POE water sanitation system from ClearWater Tech, LLC

Clean drinking water is a luxury. At ClearWater Tech we take that seriously and have customized a turnkey ozone system ideal for the homeowner who has their own well.

Iron, manganese, hydrogen sulfide and bacteria are usually the culprits when it comes to well water problems, and ozone works exceptionally well on all of them. To give you an idea of just how well, consider the fact that ozone not only works 3,150 times faster than chlorine but also has 152% more oxidizing power. For example, 2 ppm of ozone is comparable to 400 ppm of chlorine.

Nature produces and uses ozone to take care of the pollutants created by man and naturally-occurring disasters.

When you sense that fresh, clean smell after a thunderstorm - that's ozone. ClearWater Tech's ozone systems recreate nature's method of producing ozone and deliver it directly into the water to resolve existing problems.

It only makes sense to use a natural product to take care of nature's problems, and ClearWater's systems do so efficiently while removing the concern of harmful by-products.

The POE system from ClearWater Tech is easily installed in a few hours and provides your family with the clean, safe, great tasting water they deserve. Why pollute our planet with more chemicals when ozone provides a safe and natural way to take care of nature's problems.



Ozone Systems

from **ClearWater Tech, LLC.**

Toll Free: 800-262-0203

850-E Capitolio Way,
San Luis Obispo, CA 93401
mail: sales@cwtozone.com
www.cwtozone.com

SKID MOUNTED

Corona Discharge Ozone Systems

The POE10 and POE15 are complete, self-contained ozone systems built from only top quality, heavy duty components. High ozone output and adjustability allow them to accommodate a wide variety of applications, including residential wells, water stores and wastewater recycling systems.

ALL POE SYSTEMS INCLUDE:

- Ozone Generator
- Stainless Steel Pump
- Contact Vessel
- Injector Manifold
- Delay Timer
- Backflow Prevention
- Recirculation Loop
- Off-Gas Vent



POE10 & POE15

DESCRIPTION

Completely self-contained, single cell, skid-mounted CD ozone systems. Includes an ozone generator, injector, booster pump, vacuum break, contacting and venting. Also includes a time delay feature that allows for adjustable ozone dosage control.

DIMENSIONS

68" h x 29" w x 29" d, 200 lbs

OZONE OUTPUT

POE 10 - 1.3 grams/hr @ 4 SCFH (dry air)
 POE 15 - 2.8 grams/hr @ 7 SCFH (dry air)

TYPICAL APPLICATIONS

- Residential Wells
- Water Stores
- Small Water Bottling Lines
- Waste Water Recycling Systems



Skid-Mounted Specifications Chart

	M-15/02	CD15/02	P-20/02	CD20/02	POE10	POE15
Amp. Draw @ 120V/60Hz	N/A	N/A	N/A	N/A	8.6 amps	14.2 amps
Amp. Draw @ 240V/60Hz	4.8 amps	4.8 amps	5.4 amps	5.4 amps	N/A	N/A
Air Preparation	PSA Oxygen	PSA Oxygen	PSA Oxygen	PSA Oxygen	Dry Air	Dry Air
g/h @ SCFH	7.6 @ 7	10 @ 7	14 @ 14	20 @ 14	1.3 @ 4	2.8 @ 7
Percent by weight	3%	4%	3%	4%	1%	1%
High Temp. Limit	Yes	Yes	Yes	Yes	Yes	Yes
Vacuum Switch Protected	Yes	Yes	Yes	Yes	No	No
Dry Contact Control	No	Yes	No	Yes	Yes	Yes
ORP Control	Yes	Yes	Yes	Yes	No	No
4-20 mA Control	No	Yes	No	Yes	Yes	No
Manual Variable Ozone Output	No	Yes	No	Yes	Yes	No

Ozone Systems

Installation & Operation Manual

POE10 • POE12

Corona Discharge Ozone Generators




ClearWater Tech, LLC.

Integrated Ozone Systems

850-E Capitolio Way, San Luis Obispo, Ca 93401 • 805-549-9724 • Fax: 805-549-0306 • E-mail: service@cwtozone.com • www.cwtozone.com

Copyright © 2011 - ClearWater Tech, LLC • Reproduction of any kind is prohibited • LIT655 • Rev 081711

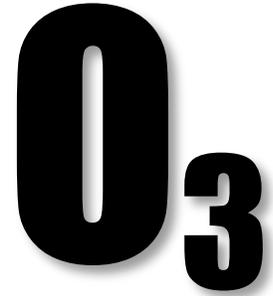

INTRODUCTION

This Installation and Operation Manual is written to assist in the installation, operation and maintenance of ozone delivery systems manufactured by ClearWater Tech, LLC. This equipment has been designed using the most modern materials and technology available.

Please read this manual carefully and in its entirety before proceeding with any installation, operation or maintenance procedure associated with this equipment. Failure to follow these instructions could result in personal injury, damage to the equipment or reduced product performance.

In an ongoing effort to improve reliability and operating efficiency, ClearWater Tech may find it necessary to make changes to its products. Therefore, the information contained in this manual may not conform in every respect to earlier versions of ClearWater Tech ozone system found in the field. If you have any questions, please contact your ClearWater Tech dealer or the ClearWater Tech service department.


TABLE OF CONTENTS

Overview	3
Safety Information	4
Theory of Operation/Product Description	6
Installation – Getting Started	8
Installation – General	9
Installation – Residential Well Side-Stream System	10
<i>Figure 1 – Residential Well Side-Stream System</i>	10
Installation – Municipal or Community Residential Side-Stream System	13
<i>Figure 2 – Municipal or Community Residential Side-Stream System</i>	13
Installation – Residential Well Booster System	16
<i>Figure 3 – Residential Well Booster System</i>	16
Installation – Atmospheric Tank Recirculation System	19
<i>Figure 4 – Atmospheric Tank Recirculation System</i>	19
Installation – Single (Straight) Pass Filling System	22
<i>Figure 5 – Single (Straight) Pass Filling System</i>	22
Operation	25
<i>Figure 6 – POE10 Unit Diagram</i>	25
<i>Figure 7 – POE12 Unit Diagram</i>	26
<i>Figure 8 – Vacuum Break Diagram</i>	28
<i>Figure 9 – Time Delay Box – Inside View</i>	29
<i>Figure 10 – Time Delay Box – Front View</i>	30
<i>Figure 11 – Apex Interface Box – Front View</i>	30
<i>Figure 12 – POE10 Timing Table</i>	31
Maintenance	32
<i>Figure 13 – Ozone Generator Cooling Fan Assembly</i>	33
<i>Figure 14 – CD10/AD and CD12/AD Heat Regenerative Air Dryer</i>	34
<i>Figure 15 – CD10/AD and CD12/AD 1” Reaction Chamber – Exploded View</i>	36
Troubleshooting	38
Appendix A – Specifications	41
Appendix B – Parts List	45
Appendix C – Maintenance Kit	46
Appendix D – Logic Schematics	47
Appendix E – Drive Module Input Voltages	59

OVERVIEW

How Ozone Is Generated

Ozone is generated by exposing oxygen molecules (O_2) in an air stream to a controlled, high energy electrical field. As the air stream passes through the electrical field produced inside the ozone generator, some oxygen molecules are split, forming single oxygen atoms (O_1). These oxygen atoms then recombine with other oxygen molecules in the air stream, forming ozone (O_3)

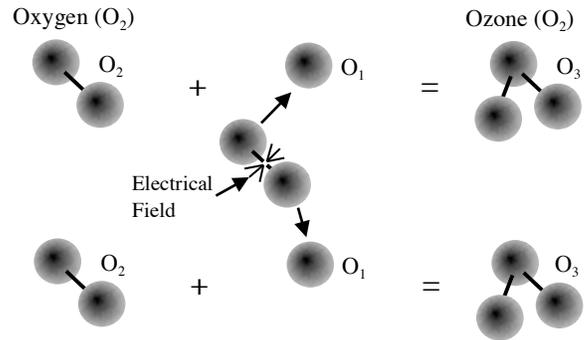

Properties of Ozone

Ozone is the most powerful oxidizer available that can be safely used in water treatment¹. It is used to treat drinking water, bottled water, swimming pool water, waste water, food and beverage processing water, and in many other applications. Ozone is effective in performing the following:

- **Disinfection** – Bacterial disinfection, inactivation of viruses and cysts.
- **Oxidation of Inorganics** – Precipitates, iron, manganese, sulfides nitrides and organically-bound heavy metals
- **Oxidation of Organics** – Including organics causing color, taste, and odor problems. Some detergents and pesticides, phenols, VOCs, turbidity control and micro-floccuity control and micro-flocculation of soluble organics.

Molecular Weight	48
Odor	Readily detectable at concentrations above 0.02 ppm in air
Color	Bluish in ozone generator cell, but ozone/air mixture exiting generator is invisible – even at high ozone concentrations.
Gas Density:	2.144 grams/liter at 32°F (Approximately 150% that of oxygen).
Solubility	Only partially soluble in water, but about 10-20 times more soluble than oxygen (at 68°F).

Benefits of Ozone Use



- Ozone is generated on site – no transportation or storage is required
- The most powerful oxidizer commercially available – very effective for disinfection and oxidation without handling problems.
- Ozone creates no potentially harmful by-products (such as THMs) – the only by-product is oxygen.
- Ozone leaves no telltale taste or odor.

¹ Water Quality Association, "Ozone for POU, POE and Small Water System Water Treatment Applications," Lisle, IL, 1999

Safety Information

Safety Warnings


Two aspects of ClearWater Tech ozone generators represent potential dangers – ozone gas and high voltage electricity.

OZONE GAS – WARNING: HIGH CONCENTRATIONS OF OZONE GAS ARE DANGEROUS TO HUMANS. LOW CONCENTRATIONS CAN CAUSE IRRITATION TO THE EYES, THROAT AND RESPIRATORY SYSTEM.

This ClearWater Tech corona discharge ozone generator is creates ozone in high concentrations. While safety precautions have been taken, entering the equipment area should be avoided if ozone gas is detected. Ozone has a very distinctive odor and is detectable at very low concentrations (0.02 ppm), which is far below OSHA's maximum permissible exposure level of 0.1 ppm.



HIGH VOLTAGE – WARNING: CLEARWATER TECH OZONE GENERATORS OPERATE AT HIGH VOLTAGE. DO NOT TAMPER WITH OR DELIBERATELY BYPASS THE COVER OR SAFETY SWITCHES BUILT INTO THE OZONE GENERATOR UNLESS INSTRUCTED TO DO SO BY THIS MANUAL. IF CONTACT IS MADE WITH OPERATING HIGH VOLTAGE COMPONENTS, ELECTRIC SHOCK WILL OCCUR.

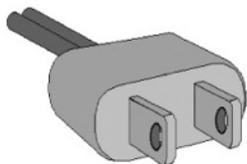

ClearWater Tech corona discharge ozone generators take line voltage and convert it to 48 VDC. A high voltage transformer then boosts the voltage. Proper care must be used by a qualified electrician when making any internal adjustments or performing any maintenance procedures.

IMPORTANT SAFETY INSTRUCTIONS

When installing and using this electrical equipment, basic safety precautions should always be followed, including the following:

- 1. READ AND FOLLOW ALL INSTRUCTIONS.**
- 2. SAVE THESE INSTRUCTIONS.**
3. All electrical connections should be made by a licensed, qualified electrician.
4. Before attempting any electrical connections, be sure all power is off at the main circuit breaker.
5. Install all electrical equipment at least five feet from any open body of water using non-metallic plumbing.
6. Install check valves and a vacuum break to prevent water from contacting the electrical equipment.
7. The electrical supply for this product must include a suitably rated switch or circuit breaker to open all ungrounded supply conductors to comply with Section 422-20 of the National Electrical Code, ANSI/NFPA 70-1987. The disconnecting means must be readily accessible to the operator(s) but installed at least five feet from any open body of water.
8. Be sure to bond (ground) the system using the copper-bonding lug on the bottom of the ozone generator. The system should be bonded with solid copper wire conforming to all local, state and national electrical codes.
9. The system should be sized appropriately for its intended use by a qualified professional familiar with the application. This equipment must be validated by the manufacturer for its intended use; failure to do so may void the warranty.

Theory of Operation/Product Description

Ozone is manufactured in the CD ozone generator by drawing in air, which is composed of 20% oxygen (O₂), and exposing it to multiple high voltage electrical discharges. This causes a percentage of the oxygen molecules to dissociate and reassemble as ozone (O₃). The ozone is drawn into the water by an injector/mixer, killing any bacteria, viruses or mold spores it contacts. Ozone is generated on-site, eliminating the need to store toxic and corrosive chemicals. The corona discharge method is the most efficient way to produce large amounts of ozone.



Chemical Formula (simplified) for Corona Discharge Ozone

In contrast to ultraviolet ozone generators, corona discharge systems produce a much higher concentration of ozone and in much larger quantities. In addition, the annual expense of replacing lamps and checking ballasts is unnecessary with corona discharge systems. Corona discharge ozone generation is the most economical and effective method to use on most water treatment applications.

ClearWater Tech manufactures high output corona discharge systems capable of producing enough ozone to oxidize iron, sulfide, manganese and act as an efficient sanitizer in a variety of applications. Ozone reacts to waterborne contaminants significantly faster than other disinfectants and the primary by-product is pure oxygen.

ClearWater Tech ozone systems are built with the finest components available. All are air cooled and are most efficient when used with a venturi injection system to create the best possible contact and mixing of ozone while maintaining a high level of safety.

Product Description

The POE10/12 skid mounted systems from ClearWater Tech are the first small systems to offer high quality components, a built-in time delay system and innovative solutions to the problems usually associated with “one size fits all” ozonation systems. The POE10 and POE12 systems are self-contained, pre-plumbed and pre-wired, offering simple installation and “works the first time” confidence.

The systems come completely assembled and water tested from ClearWater Tech. Its design allows the installer to place the system in up to five different configurations by simply changing the inlet and outlet connections.

Air Preparation

ClearWater Tech corona discharge ozone generators require a source of clean, dry, oil-free, oxygen-enriched or dry air for effective ozone production. To meet that need, the POE10 and POE12 use an internal heat regenerative dry air system. The heat regenerative system operates via a vacuum which draws in ambient air and dries it to a -10 to -20°F dew point at 20% oxygen purity. The CD10/AD and CD12/AD (“AD” represents Air Dryer) incorporate a heat regenerative air dryer system, rated with a duty cycle of no more than 10 hours of operation in a 24 hour period in conditions up to 75% relative humidity non-condensing. Due to the operation of the internal air dryer, continuous power must be applied to the CD10/AD and CD12/AD for proper operation. As the ambient air travels through the dryer chambers the sieve material inside traps the moisture from the air and allows the oxygen to pass to the ozone reaction chamber. The heat, generated by the heating rods inside the dryer chamber, then evaporates the moisture that has been trapped in the sieve and expels off the top of the sieve bed. The two dryer chambers and attached 3-way solenoid valve operate on a timed cycle. Dryer chamber 1 heats first evaporating moisture for 1-1/2 hours, while the solenoid is energized allowing the vacuum from the venturi to draw air flow through dryer chamber 2. During this time the “AIR PREP” LED will flash and “DRYER 1” LED will be

Theory of Operation/Product Description

illuminated continuously. After the 1-1/2 hours there is a 1/2 hour cool down period, power to dryer chamber 1 will be discontinued, correspondingly “DRYER 1” LED will not be illuminated. Note: The “AIR PREP” LED will remain flashing throughout the cycle. After the cool down period dryer chamber 2 will heat and the solenoid valve will de-energize, allowing vacuum from the venturi to draw air flow through dryer chamber 1. During this time the “AIR PREP” LED will flash and “DRYER 2” LED will be illuminated continuously. After 1-1/2 hours there is a 1/2 hour cool down period when power to dryer chamber 2 will be discontinued; correspondingly, “DRYER 2” LED will not be illuminated. After this 1/2 hour cool down, the air dryer cycle will repeat.

Ozone Generator

The feed gas is drawn out of the air dryers and through the ozone generator by the vacuum created at the ozone injector. An external air flow meter and vacuum gauge is provided to control and monitor the air flow and vacuum through the ozone generator.

As the feed gas enters the thermally-protected reaction chambers inside the ozone generator, some of the oxygen molecules are split while passing through the high voltage electrical field (the “corona”), forming single oxygen atoms (O1). These oxygen atoms then recombine with other oxygen molecules in the air stream, forming ozone.

Ozone Injection/Contacting

The ozone injector serves two purposes: One, it creates the vacuum required to safely draw the ozone gas from the ozone generator and two, it provides a means by which the ozone gas can become dissolved in water. A very dynamic injection process is required to effectively dissolve ozone in water.


ClearWater Tech injection systems use only Mazzei® injectors for maximum mass transfer efficiency. The injector produces a cavitation effect, enabling the ozone gas to join the water stream in the form of extremely tiny bubbles. These bubbles must be as small as possible in order to increase the ratio of bubble surface area to the amount of ozone entering the water.

A Short Course in Fine Bubbles

Lesson 1 – The large bubble (20mm) has a volume of 4.19 cm³ and a surface area of 12.6 cm².

Lesson 2 – 296 small bubbles (3mm) could be made from the large bubble in lesson 1. They would have a total surface area of 83.6cm². This is 6.6 times the surface area of the large bubble.

Lesson 3 – Theoretically, 6.6 times as much water could be ozonated with the same amount of ozone!

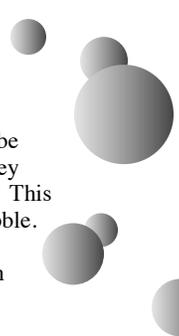

Ozone Destruct

Depending on where the POE10 or POE12 is installed, an ozone destruct system may be needed to ensure safe operation. The ClearWater Tech off-gas destruct systems consists of two components: the ozone destruct unit (a heated chamber filled with manganese dioxide and copper oxide) and a water trap. Used in conjunction with the off-gas vent provided at the top of the contact tank, the ozone destruct system is an effective way to vent the contact vessel(s) when it is impractical to send the off-gas to atmosphere or reintroduce it to the water.

Installation – Getting Started

Shipping Terms

Unless special arrangements have been made, the ozone equipment will be shipped FOB ClearWater Tech's factory in San Luis Obispo, CA. The freight charges will be prepaid and billed or shipped freight collect. Transfer of liability to the freight company and the customer occurs as the equipment leaves the factory loading dock and is accepted by the freight line.

Freight Inspection

All equipment should be thoroughly inspected immediately upon delivery. If any damage is noticed, promptly notify the freight line and request an on-site inspection.

Unpacking

Compare the ozone system equipment received to the packing list provided. Before beginning any installation procedures, thoroughly inspect all components for damage. If damage is noticed, promptly notify the freight carrier and request an on-site inspection. Inspect all packing materials for small parts before discarding. Inspect all plumbing, fittings and tubing for packing material that may have become lodged in openings.

Equipment Placement

When placing the ozone system components in the equipment room, make sure to consider safety, maintenance requirements, local building and fire codes, etc. The components should be easily accessible by the operators, including equipment access doors and electrical hook-up boxes. All meters, gauges, indicator lights, and switches should be visible and accessible. Dimensional drawings of the PEO10 and PEO12 are included in Section A of the Appendix.

A total of 10' of ozone vent tubing is supplied to allow the contact vessel auto vent to be vented out of the building if an ozone destruct unit is not ordered.

Mounting holes are located on the bottom skid rails, allowing the unit to be secured to the floor. Mounting hardware is not provided.

Like any electronic component, performance and longevity is enhanced by favorable operating conditions. Also, since the ozone generator is air-cooled, a relatively dust-free, well-ventilated area is required. No caustic chemicals should be stored in the area surrounding the equipment. A minimum clearance of six inches from the vents on the cover of the ozone generator is required.

The PEO10/12 enclosures are *not* designed to withstand outdoor elements, including direct contact with water and/or temperature extremes. Therefore, the equipment must be installed in an environment consistent with the following operating parameters:

- Ambient temperature range: 20°F (-6.5°C) to 95°F (35°C) continuous. If the temperature around the equipment consistently exceeds 95°F (35°C), additional air-cooling must be provided.
- Humidity: 0 – 90% relative humidity, non-condensing environment
- Line voltage: +/-10% of rated input

Note: Equipment installed in extreme environmental conditions will void manufacturer's warranty.

Allow room for the peripheral equipment (if any)



Installation – General

The POE10/12 is factory plumbed with 1” schedule 80 PVC pipe for flow rates from 5 to 18 gpm. This pipe size should be maintained in the plumbing connections.

NOTES:

- Adequate use of unions and isolation valves is strongly recommended to facilitate maintenance and repairs.
- Use Schedule 80 PVC for all plumbing connections wherever possible. Plumbing size requirements are dictated by the water flow characteristics of the system.
- Make sure to use proper plumbing practices and secure all plumbing and system equipment according to local codes.
- Secure all plumbing with unistrut or similar hardware.
- Ozone is a powerful oxidizer and will degrade certain materials. Use ozone-compatible plumbing materials for section(s) of the system that will come in contact with ozone dissolved in water. The following is a list of materials that are compatible with ozone:
 - Viton
 - Kynar
 - Teflon
 - Silicon
 - Hepalon
 - Stainless Steel (300 series)
 - EPDM
 - Concrete
 - Schedule 80 PVC
 - Schedule 40 PVC
- Depending on the application, other components (psi gauge, flow meter, etc.) may be installed to assist in monitoring system parameters.

Tubing Connections

All tubing connections between the ozone generator, vacuum break and injector manifold have been completed at the factory. 1/4” Teflon® tubing is used for all ozone connections. **Important: Do not replace this tubing with any other kind.**

Off-Gas Vent Installation

A stainless steel off-gas vent is supplied with the POE units. This vent is installed on the 3/4” male pipe connection located on the top of the contactor. Use Teflon® tape or an approved pipe sealant for this connection if removal is needed.

Teflon® off-gas vent tubing is supplied with the POE system. If an ozone destruct unit is not purchased, this tubing should be connected from the 1/4” Teflon® compression fitting supplied with the contact vessel automatic air vent to a safe location outside the building.

On the following pages are the five most common installations:

- Residential Well Side Stream System
- Municipal or Community Residential Side Stream System
- Residential Well Booster System
- Atmospheric Tank Recirculation System
- Single (Straight) Pass Filling System.

Choose the installation which matches yours and follow the installation and start-up instructions for that installation and then proceed to the OPERATION section which follows the installation sections

Installation – Residential Well Side-Stream System


In this configuration the POE system is placed between the well head and the pressure tank with any applicable filtration after the pressure tank. Piping from the well is connected to the POE system inlet tee under the injector manifold. The side connection of the POE system outlet tee is piped to the system check valve and pressure switch prior to the pressure tank inlet. The booster pump is piped to the top connection of the POE system outlet tee completing the plumbing installation of the unit.

In a residential well configuration the time delay controller is wired to the pressure switch. This will allow the time delay controller to receive a 120 Volt signal whenever the pressure switch is activated. Attach the indicated wire from the three position AMP® pin connector on the time delay controller to one of the two 120 volt wires on the pump side of the pressure switch. The POE system main power cord should be plugged into a dedicated 20 amp receptacle capable of handling the power requirement of the POE system.

The POE system comes from the factory with no time delay preset. It will operate the pump and ozone portion of the unit with the operation of the pressure switch. To set the delay timer for your water conditions refer to the time delay controller setting instructions.

Residential Well Side-Stream System

Figure 1

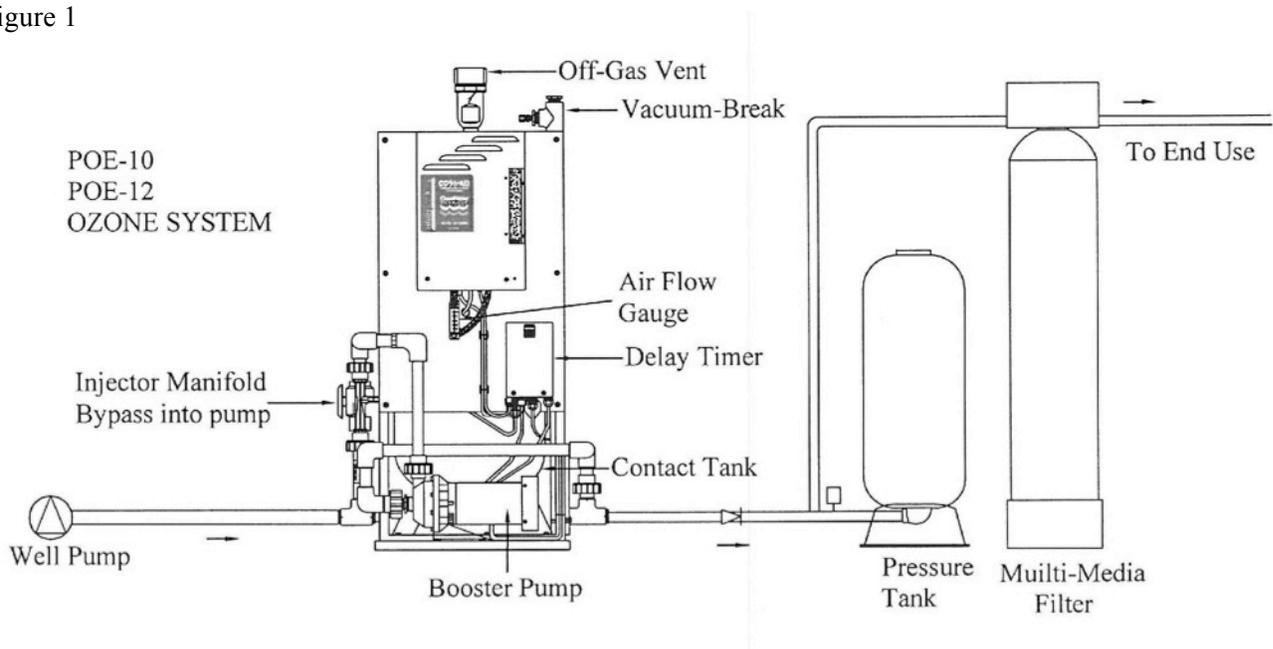

Installation on a Residential Well Side Stream System

1. When installing the POE10/12 system be sure to place the equipment in a sheltered location protected from direct rain and dusty conditions. Freezing temperatures and temperatures in excess of 100°F for extended periods of time will damage the equipment and void the warranty.
2. The POE10/12 system comes with 6' of 12/3 NEMA 5-15 (standard residential) power cord and requires a dedicated 20 amp receptacle. The unit should be placed within 4' of the receptacle. Use of an extension cord over 6' in length or less than 12/3 gauge will result in damage to the equipment
3. It is recommended that a three valve maintenance bypass be added when installing the POE system. This is a standard practice that will allow the existing system to operate while maintenance is being performed on the POE system.

Installation – Residential Well Side-Stream System

4. When connecting to the 1” threaded Schedule 80 PVC inlet and outlet tees on the POE unit. It is recommended that good plumbing practice be followed by installing unions at the inlet and outlet connections. Care should be taken not to apply heat or pipe sealants that might deteriorate the PVC tees. All connecting piping should be braced and plumbed so that no torsional loads or stress be exerted on the inlet or outlet fittings. NOTE: If the well pump is not equipped with a check valve, an auxiliary check valve must be installed between the well pump and the
5. After connecting the piping from the well to the inlet tee and piping the outlet tee side connection to the system check valve before the pressure tank. Plumb the 1” threaded outlet tee top connection to the 1 1/4” threaded connection on the recirculation pump inlet. A union at the pump connection will make any future service easier. 1” schedule 80 PVC or 1” copper pipe should be used. Do not apply any heat to the outlet tee connection.
6. Fill the clear view vacuum break with water by turning the fill/overflow fitting by hand counter clockwise to face upwards. Add water until it overflows. Return the fitting to the downwards facing position. Connect the provided 3/4” braided tubing to this fitting and plumb to a floor drain or position so that any water flow from this line will be easily noticed. Do not plumb this line to any drain above the elevation of the overflow fitting. Follow all regulations concerning backflow and air gap connections. Periodic water flows from this line can occur. Failure to connect this line to an appropriate drain may result in water damage should a check valve fail. ClearWater Tech is not responsible for any damage resulting from water overflow from the clear view vacuum break.
7. Disconnect the 1/4” Teflon® air vent tubing from the automatic air release at the top of the contact tank. Slowly open the maintenance bypass or activate the well pump. Allow the POE system contact tank to fill until no air is released from the tank. Reconnect the tubing. Open all valves fully and check for leaks.
8. After disconnecting power to the well pump and pressure switch. Connect the center wire (MCI) on the time delay controllers 3 position AMP® pin connector to one of the two 120V power wires leading to the well pump in the pressure switch. This connection must be made on the “pump” side of the switch. Reconnect the power.

Startup Procedures on a Residential Well Side Stream System

1. The POE10/12 systems are shipped from ClearWater Tech with the time delay controller in the no delay position (no time indicated on the time delay relay). For initial adjustment of the venturi feed gas flow, it is recommended that one minute be set to allow for venturi adjustment.
2. After unplugging the POE unit, remove the cover from the time delay relay. Referring to the adjustments outlined in the time delay relay section, set the relay for one minute. Depending on your installation removal of the relay for this procedure maybe necessary. The relay maybe removed for adjustment only if the POE unit is unplugged. Removal of this relay while the unit is plugged in may result in damage and will void the warranty. After setting one minute on the relay, plug the POE system in again.
3. Activate the CD10AD/12AD by depressing the ON/OFF rocker switch on the underside of the unit. After several seconds the green main power light, High Voltage drive lights and the red External Loop indicator will come on. The amber dryer indicator lamp will start blinking and one of the two amber dryer chamber lights will be on. At this time none of the ten upper ozone output indicator lights should be on. They will be activated with the ozone generator portion of the CD10AD/12AD by the time delay relay.
4. The POE10/12 systems are shipped from ClearWater Tech with the venturi water bypass valve and the feed gas control valve in the closed position. This is the correct position for initial startup.

Installation – Residential Well Side-Stream System

5. Start the POE unit by lowering the system pressure to engage the well pump. This can be done by opening any hose bib or faucet downstream of the pressure tank. When the pressure switch activates, the POE system booster pump and ozone generator will now turn on.
6. You will now have the normal pump cycle and one additional minute to adjust the venturi feed gas flow. Slowly open the feed gas flow valve at the vacuum break. This will cause water to rise in the vacuum break and dried air to flow in the SCFH gauge under the CD10AD/12AD ozone generator. Adjust the feed gas control valve until the SCFH gauge reads between 3-5 SCFH for CD10/AD and 6-8 SCFH for CD12/AD. If this takes more than one pump cycle or if water is drawn into the venturi, refill the vacuum break and recycle the well pump as necessary.

Installation – Municipal or Community Residential Side-Stream System


In this configuration the POE system is placed between the water service and the first treated outlets. Where possible, irrigation connections should be made before the POE system. As with the installation of any piece of water treatment equipment, a three valve maintenance bypass should be installed. Piping from the water service is connected to the POE system inlet tee under the injector manifold. The side connection of the POE system outlet tee is then piped back to the distribution system or bypass. The booster pump inlet is piped to the top connection of the POE system outlet tee completing the plumbing installation. Any filtration dictated by water conditions should be installed with its own maintenance bypass downstream of the POE unit.

In a residential municipal configuration the time delay controller is wired to a flow switch on the house side or downstream of the POE unit. This will allow the time delay controller to receive a dry contact signal whenever there is a demand for water. This flow switch is connected to the indicated wires of the time delay controller's three position AMP® pin connector. The POE system main power cord should be plugged into a dedicated 20 amp receptacle capable of handling the power requirement of the POE system.

The POE system comes from the factory with no time delay preset. It will operate the pump and ozone portion of the unit with the operation of the flow switch. To set the delay timer for your water conditions refer to the time delay controller setting instructions.

Municipal or Community Residential Side-Stream System

Figure 2

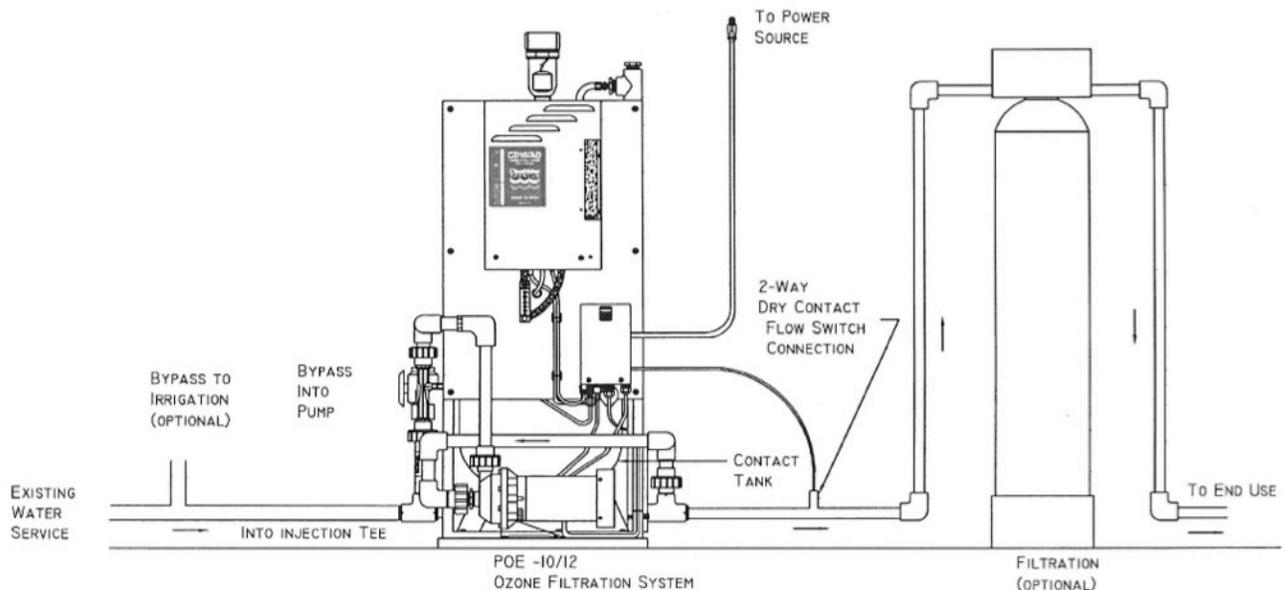

Installation Guide on a Municipal/Community Residential Side Stream System

1. When installing the POE10/12 system be sure to place the equipment in a sheltered location protected from direct rain and dusty conditions. Freezing temperatures and temperatures in excess of 100°F for extended periods of time will damage the equipment and void the warranty.
2. The POE10/12 system comes with a 6' 12/3 NEMA 5-15 (standard residential) power cord and requires a dedicated 20 amp receptacle. The unit should be placed within 4' of the receptacle. Use of an extension cord over 6' in length or less than 12/3 gauge will result in damage to the equipment.

Installation – Municipal or Community Residential Side-Stream System

3. It is recommended that a three valve maintenance bypass be added when installing the POE system. This is a standard practice that will allow the existing system to operate while maintenance is being performed on the POE system.
4. When connecting to the 1” threaded Schedule 80 PVC inlet and outlet tees on the POE unit. It is recommended that good plumbing practice be followed by installing unions at the inlet and outlet connections. Care should be taken not to apply heat or pipe sealants that might deteriorate the PVC tees. All connecting piping should be braced and plumbed so that no torsional loads or stress be exerted on the inlet or outlet fittings.
5. After connecting the piping from the water service to the inlet tee and piping the outlet tee side connection back to the system or bypass. Plumb the 1” threaded outlet tee top connection to the 1 1/4” threaded connection on the recirculation pump inlet. A union at the pump connection will make any future service easier. 1” schedule 80 PVC or 1” copper pipe should be used. Do not apply any heat to the inlet or outlet tee connections.
6. Fill the clear view vacuum break with water by turning the fill/overflow fitting by hand counter clockwise to face upwards. Add water until it overflows. Return the fitting to the downwards facing position. Connect the provided 3/4” braided tubing to this fitting and plumb to a floor drain or position so that any water flow from this line will be easily noticed. Do not plumb this line to any drain above the elevation of the overflow fitting. Follow all regulations concerning backflow and air gap connections. Periodic water flows from this line can occur. Failure to connect this line to an appropriate drain may result in water damage should a check valve fail. ClearWater Tech is not responsible for any damage resulting from water overflow from the clear view vacuum break.
7. Disconnect the 1/4” Teflon® air vent tubing from the automatic air release at the top of the contact tank. Slowly open the water service or maintenance bypass. Allow the POE system contact tank to fill until no air is released from the tank. Reconnect the tubing. Open all valves fully and check for leaks.
8. Connect the two outer wires (dry contact) on the time delay controllers 3 position AMP® pin connector to a flow switch installed downstream of the POE unit.

Startup Procedures on a Municipal/Community System

1. The POE10/12 systems are shipped from ClearWater Tech with the time delay controller in the no delay position (no time indicated on the time delay relay). For initial adjustment of the venturi feed gas flow, it is recommended that one minute be set to allow for venturi adjustment. This will not necessary on a Municipal type of system if a hose bib or faucet can be left open maintaining the flow switch dry contact. If a this is not possible refer to step 2.
2. After unplugging the POE unit, remove the cover from the time delay relay. Referring to the adjustments outlined in the time delay relay section, set the relay for one minute. Depending on your installation removal of the relay for this procedure maybe necessary. The relay maybe removed for adjustment only if the POE unit is unplugged. Removal of this relay while the unit is plugged in may result in damage and will void the warranty. After setting one minute on the relay, plug the POE system in again.
3. Activate the CD10AD/12AD by depressing the ON/OFF rocker switch on the underside of the unit. After several seconds the green main power light, High Voltage drive lights and the red External Loop indicator will come on. The amber dryer indicator lamp will start blinking and one of the two amber dryer chamber lights will be on. At this time none of the ten upper ozone output indicator lights should be on. They will be activated with the ozone generator portion of the CD10AD/12AD by the time delay relay.
4. The POE10/12 systems are shipped from ClearWater Tech with the venturi water bypass valve and the feed gas control valve in the closed position. This is the correct position for initial startup.

Installation – Municipal or Community Residential Side-Stream System

5. Start the POE unit by opening any hose bib or faucet downstream of the POE system. When the flow switch activates, the POE system booster pump and ozone generator will now turn on.
6. You may now adjust the feed gas flow to the venturi. Slowly open the feed gas flow control valve at the vacuum break. This will allow water to rise in the vacuum break riser column and dried air to flow in the SCFH gauge under the CD10AD/12AD ozone generator. Adjust the feed gas control valve until the SCFH gauge reads between 3-5 SCFH for CD10/AD and 6-8 SCFH for CD12/AD. Should water be drawn into the venturi. Refill the vacuum break and recycle the system as necessary.


Installation – Residential Well Booster System

In this configuration the POE system is placed between the well head and the pressure tank with any applicable filtration after the pressure tank. Piping from the well is connected to the POE system booster pump inlet. The side connection of the POE system outlet tee is piped to the system check valve and pressure switch prior to the pressure tank inlet. Threaded plugs (1" PVC) provided with the POE unit should be inserted into the side connection of the POE inlet tee and the top connection of the POE outlet tee.

In a standard residential well configuration the time delay controller is wired to the pressure switch. This will allow the time delay controller to receive a 120 Volt signal whenever the pressure switch is activated. Attach the indicated wire from the time delay controller's three position AMP® pin connector to one of the two 120 volt wires on the pump side of the pressure switch. The POE system main power cord should be plugged into a dedicated 20 amp receptacle capable of handling the power requirement of the POE system.

Residential Well Booster System

Figure 3

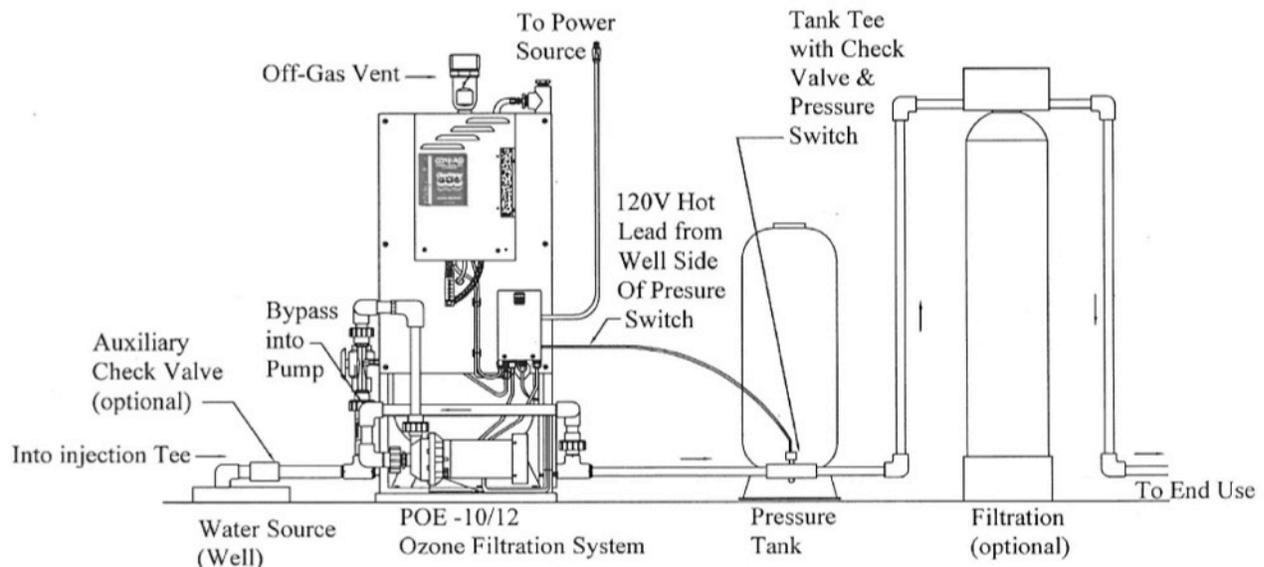

Installation on a Residential Well Booster System

1. When installing the POE10/12 system be sure to place the equipment in a sheltered location protected from direct rain and dusty conditions. Freezing temperatures and temperatures in excess of 100°F for extended periods of time will damage the equipment and void the warranty.
2. The POE10/12 system comes with a 6' 12/3 NEMA 5-15 (standard residential) power cord and requires a dedicated 20 amp receptacle. The unit should be placed within 4' of the receptacle. Use of an extension cord over 6' in length or less than 12/3 gauge will result in damage to the equipment.
3. It is recommended that a three valve maintenance bypass be added when installing the POE system. This is a standard practice that will allow the existing system to operate while maintenance is being performed on the POE system.
4. When connecting to the 1" threaded Schedule 80 PVC inlet and outlet tees on the POE unit. It is recommended that good plumbing practice be followed by installing unions at the inlet and outlet

Installation – Residential Well Booster System

connections. Care should be taken not to apply heat or pipe sealants that might deteriorate the PVC tees. All connecting piping should be braced and plumbed so that no torsional loads or stress be exerted on the inlet or outlet fittings. Do not apply any heat to the inlet or outlet tee connections.

5. Connect the piping from the well to the 1 1/4" threaded connection on the recirculation pump inlet. A union at the pump connection will make any future service easier. Connect the outlet tee side connection to the system check valve before the pressure tank. Install the 1" threaded PVC plugs supplied with the POE unit into the side connection of the inlet tee and the top connection of the outlet tee.
6. Fill the clear view vacuum break with water by turning the fill/overflow fitting by hand counter clockwise to face upwards. Add water until it overflows. Return the fitting to the downwards facing position. Connect the provided 3/4" braided tubing to this fitting and plumb to a floor drain or position so that any water flow from this line will be easily noticed. Do not plumb this line to any drain above the elevation of the overflow fitting. Follow all regulations concerning backflow and air gap connections. Periodic water flows from this line can occur. Failure to connect this line to an appropriate drain may result in water damage should a check valve fail. ClearWater Tech is not responsible for any damage resulting from water overflow from the Clear view Vacuum Break.
7. Disconnect the 1/4" Teflon® air vent tubing from the automatic air release at the top of the contact tank. Slowly open the maintenance bypass or activate the well pump. Allow the POE system contact tank to fill until no air is released from the tank. Reconnect the tubing. Open all valves fully and check for leaks
8. After disconnecting power to the well pump and pressure switch. Connect the center wire (MCI) on the time delay controllers 3 position AMP® pin connector to one of the two 120V power wires leading to the well pump in the pressure switch. This connection must be made on the "pump" side of the switch. Reconnect the power.
9. With the system up to pressure and the well pump off. Plug in the main power cord to the POE system. Switch the CD10AD/12AD ozone generator ON. After a few seconds the main power light, HV drive light and external loop indicator lights should come on. The dryer power indicator should start blinking and one of the two dryer chamber lights will be on. At this time none of the ten upper ozone output indicator lights should be on. They will be activated with the ozone generator and time delay relay by the pressure switch.

Startup Procedures on a Residential Well Booster System

1. The POE10/12 systems are shipped from ClearWater Tech with the time delay controller in the no delay position (no time indicated on the time delay relay). For initial adjustment of the venturi feed gas flow, it is recommended that one minute be set to allow for venturi adjustment.
2. After unplugging the POE unit, remove the cover from the time delay relay. Referring to the adjustments outlined in the time delay relay section, set the relay for one minute. Depending on your installation, removal of the relay for this procedure maybe necessary. The relay maybe removed for adjustment only if the POE unit is unplugged. Removal of this relay while the unit is plugged in may result in damage and will void the warranty. After setting one minute on the relay, plug the POE system in again.
3. The POE10/12 systems are shipped from ClearWater Tech with the venturi water bypass valve and the feed gas control valve in the closed position. This is the correct position for initial startup.
4. Start the POE unit by lowering the system pressure to engage the pressure switch/well pump. This can be done by opening a hose bib or faucet downstream (house side) of the pressure tank. When the pressure switch activates the well pump, the POE system booster pump and ozone generator will turn on.

Installation – Residential Well Booster System

5. You may now adjust the feed gas flow to the venturi. Slowly open the feed gas flow control valve at the vacuum break. This will allow water to rise in the vacuum break riser column and dried air to flow in the SCFH gauge under the CD10AD/12AD ozone generator. Adjust the feed gas control valve until the SCFH gauge reads between 3-5 SCFH for CD10/AD and 6-8 SCFH for CD12/AD. Should water be drawn into the venturi., refill the vacuum break and recycle the system as necessary

Installation – Atmospheric Tank Recirculation System

In this configuration the POE system is placed adjacent to the tank to be treated. Piping from the tank bottom is connected to the POE system booster pump inlet. The POE system outlet tee side connection should be piped back to the bottom of the tank. Threaded plugs (1" PVC) provided with the POE unit should be inserted into the side connection of the POE system inlet tee and the top connection of the POE system outlet tee.


In this configuration the time delay controller can be activated by:

1. A flow switch on the tank fill line
2. The tank fill float switch
3. A 24 hr timer

Follow the instructions in the time delay controller section for connecting these types of switches to the time delay controller's three position AMP® pin connector. The POE system main power cord should be plugged into a dedicated 20 amp receptacle capable of handling the power requirement of the POE system.

Atmospheric Tank Recirculation System

Figure 4

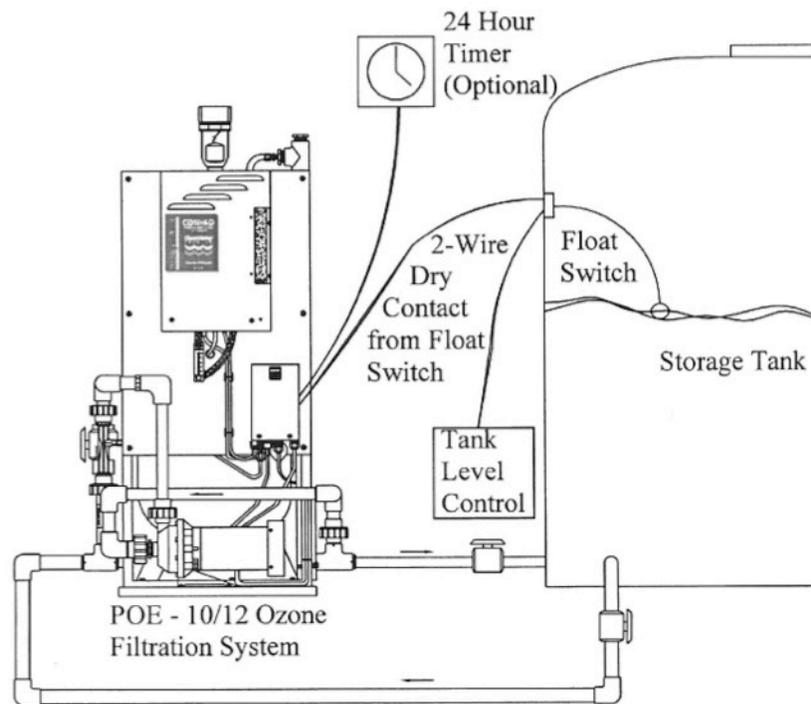

Installation on an Atmospheric Tank Recirculation System

1. When installing the POE10/12 system be sure to place the equipment in a sheltered location protected from direct rain and dusty conditions. Freezing temperatures and temperatures in excess of 100°F for extended periods of time will damage the equipment
2. The POE10/12 system comes with a 6' 12/3 NEMA 5-15 (standard residential) power cord and requires a dedicated 20 amp receptacle. The unit should be placed within 4' of the receptacle. Use of an extension cord over 6' in length or less than 12/3 gauge will result in damage to the equipment.
3. When connecting to the 1" threaded Schedule 80 PVC inlet and outlet tees on the POE unit. It is recommended that good plumbing practice be followed by installing unions at the inlet and outlet

Installation - Atmospheric Tank Recirculation System

connections. Care should be taken not to apply heat or pipe sealants that might deteriorate the PVC tees. All connecting piping should be braced and plumbed so that no torsional loads or stress be exerted on the inlet or outlet fittings. Do not apply any heat to the inlet or outlet tee connections.

4. Plumb from the tank outlet or a dedicated bulkhead fitting in the bottom 25% of the tank to the 1 1/4" threaded connection on the recirculation pump inlet. An isolation valve at the tank and a union at the pump connection will make any future service easier. Then connect the side connection on POE unit outlet tee back to the bottom 25% of the tank. If necessary return piping to the tank can be plumbed up and over the side of the tank. It is still good practice to continue this piping to the lower 25% of the tank. 1" schedule 80 PVC or 1" copper pipe should be used. Install the 1" threaded PVC plugs supplied with the POE unit into the side connection of the inlet tee and the top connection of the outlet tee.
5. Fill the Clear view vacuum break with water by turning the fill/overflow fitting by hand counter clockwise to face upwards. Add water until it overflows. Return the fitting to the downwards facing position. Connect the provided 3/4" braided tubing to this fitting and plumb to a floor drain or position so that any water flow from this line will be easily noticed. Do not plumb this line to any drain above the elevation of the overflow fitting. Follow all regulations concerning backflow and air gap connections. Periodic water flows from this line can occur. Failure to connect this line to an appropriate drain may result in water damage should a check valve fail. ClearWater Tech is not responsible for any damage resulting from water overflow from the Clear view Vacuum Break.
6. Disconnect the 1/4" Teflon® air vent tubing from the automatic air release. Slowly open the tank isolation valves and allow the POE system contact tank to fill until no air is released from the tank. Reconnect the tubing. Open all valves fully and check for leaks.
7. In this configuration the POE system can be activated by a float switch, a flow switch in the tank fill line or a 24 hour timer. See the time delay relay section for the appropriate connection to the three position AMP® pin on the time delay relay.
8. With the system filled and the time delay relay connected. Plug in the main power cord to the POE system. Activate the CD10AD/12AD by depressing the ON/OFF rocker switch on the underside of the unit. After several seconds the green main power light, HV drive light and external loop indicator lights should come on. The dryer power indicator should start blinking and one of the two dryer chamber indicator lights should be on. At this time none of the ten upper ozone output indicator lights will be on. They will be activated with the ozone generator by the time delay relay.

Startup Procedures on an Atmospheric Tank Recirculation System

1. The POE10/12 systems are shipped from ClearWater Tech with the time delay controller in the no delay position (no time indicated on the time delay relay). For initial adjustment of the venturi feed gas flow, it is recommended that one or more minutes be set to allow for venturi adjustment. In the recirculation configuration it will be common for the system to be adjusted from ten minutes to as much as four hours.
2. After unplugging the POE unit, remove the cover from the time delay relay. Referring to the adjustments outlined in the time delay relay section, set the relay for one minute or more. Depending on your installation removal of the adjustment only if the POE unit is unplugged. Removal of this relay while the unit is plugged in may result in damage and will void the warranty. After setting one minute on the relay, plug the POE system in again.
3. The POE10/12 systems are shipped from ClearWater Tech with the venturi water bypass valve and the feed gas control valve in the closed position. This is the correct position for initial startup.

Installation - Atmospheric Tank Recirculation System

4. Start the POE unit by engaging the time delay relay with the switching system chosen for your installation. When the switch activates the time delay relay, the POE system booster pump and ozone generator will turn on.
5. You may now adjust the feed gas flow to the venturi. Slowly open the feed gas flow control valve at the vacuum break. This will allow water to rise in the vacuum break riser column and dried air to flow in the SCFH gauge under the CD10AD/12AD ozone generator. Adjust the feed gas control valve until the SCFH gauge reads between 3-5 SCFH for CD10/AD and 6-8 SCFH for CD12/AD. Should water be drawn into the venturi., refill the vacuum break and recycle the system as necessary.


Installation – Single (Straight) Pass Filling System

In this configuration the POE system is placed between the treated water storage tank and the bottle filling equipment. Piping from the storage tank bottom is connected to the POE system booster pump inlet. The POE system outlet tee side connection should be piped to the bottle filling equipment. A valve for ozone residual sampling or a monitoring device should be placed in this line before the filling equipment. Threaded plugs (1" PVC) provided with the POE unit should be inserted into the side connection of the POE system inlet tee and the top connection of the POE system outlet tee.

The POE system main power cord should be plugged into a dedicated 20 amp NEMA receptacle capable of handling the power requirement of the POE system. In this configuration the POE unit can be activated by a flow switch in the filler line. Follow the instruction in the time delay controller section for connecting these types of switches to the time delay controllers three position AMP® pin connector.

Single (Straight) Pass Filling System

Figure 5

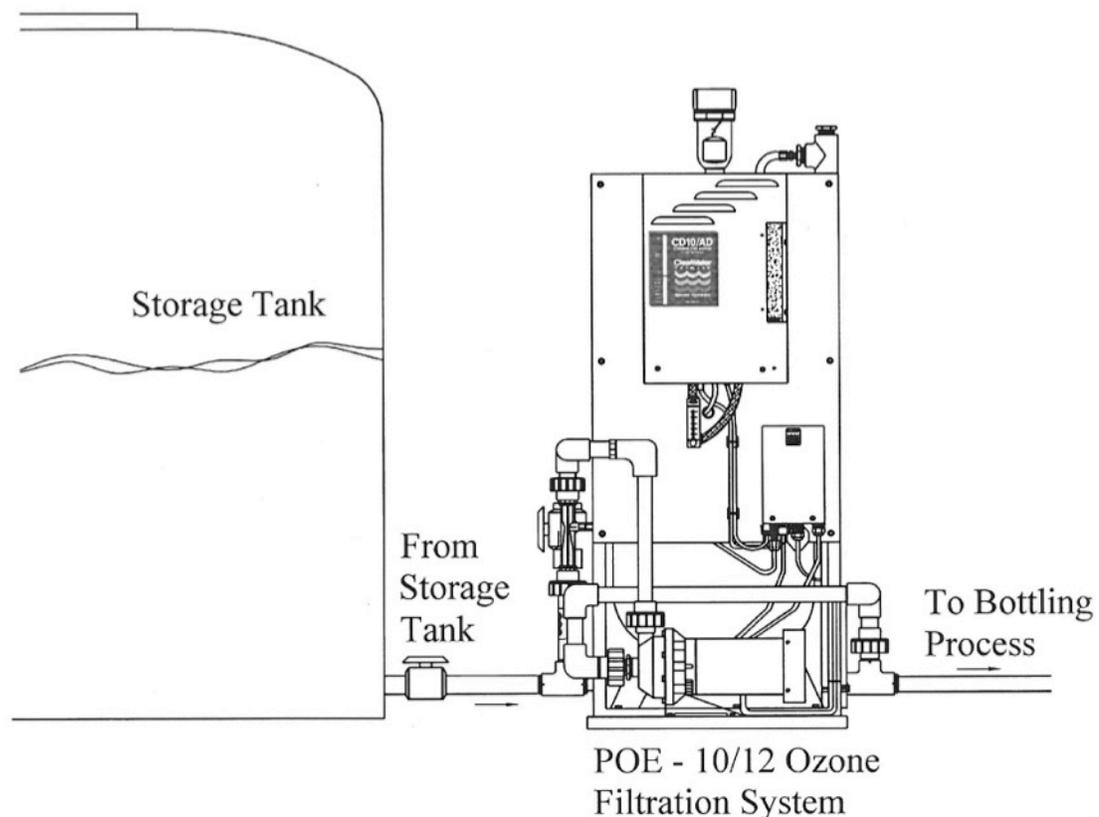

Installation of a Single (Straight) Pass Filling System

1. When installing the POE10/12 system be sure to place the equipment in a sheltered location protected from direct rain and dusty conditions. Freezing temperatures and temperatures in excess of 100°F for extended periods of time will damage the equipment and void the warranty.
2. The POE10/12 system comes with a 6' 12/3 NEMA 5-15 (standard residential) power cord and requires a dedicated 20 amp receptacle. The unit should be placed within 4' of the receptacle. Use of an extension cord over 6' in length or less than 12/3 gauge will result in damage to the equipment.

Installation – Single (Straight) Pass Filling System

3. When connecting to the 1” threaded Schedule 80 PVC inlet and outlet tees on the POE unit. It is recommended that good plumbing practice be followed by installing unions at the inlet and outlet connections. Care should be taken not to apply heat or pipe sealants that might deteriorate the PVC tees. All connecting piping should be braced and plumbed so that no torsional loads or stress be exerted on the inlet or outlet fittings. Do not apply any heat to the inlet or outlet tee connections.
4. Plumb from the tank outlet or a dedicated bulkhead fitting in the bottom 25% of the tank to the 1 1/4” threaded connection on the recirculation pump inlet. An isolation valve at the tank and a union at the pump connection will make any future service easier. Then connect the side connection on POE unit outlet tee back to the bottle filling equipment. 1” schedule 80 PVC is recommended. Install the 1” threaded PVC plugs supplied with the POE unit into the side connection of the inlet tee and the top connection of the outlet tee.
5. Fill the Clear view vacuum break with water by turning the fill/overflow fitting by hand counter clockwise to face upwards. Add water until it overflows. Return the fitting to the downwards facing position. Connect the provided 3/4” braided tubing to this fitting and plumb to a floor drain or position so that any water flow from this line will be easily noticed. Do not plumb this line to any drain above the elevation of the overflow fitting. Follow all regulations concerning backflow and air gap connections. Periodic water flows from this line can occur. Failure to connect this line to an appropriate drain may result in water damage should a check valve fail. ClearWater Tech is not responsible for any damage resulting from water overflow from the Clear view Vacuum Break.
6. A flow or pressure switch can be used to start the POE system. This switch should be installed downstream of the POE unit before any filling equipment. Set the time delay relay control for one minute. This will allow the system to continue to run for brief time periods between fill cycles and avoid “short cycling” the POE unit. See the time delay relay section for appropriate connection to the time delay relay controls 3 position AMP® pin connector.
7. Disconnect the 1/4” Teflon® air vent tubing from the automatic air release. Slowly open the tank isolation valves and allow the POE system contact tank to fill until no air is released from the tank. Reconnect the tubing. Open all valves fully and check for leaks.
8. With the system filled and the time delay relay connected. Plug in the main power cord to the POE system. Activate the CD10AD/12AD by depressing the ON/OFF rocker switch on the underside of the unit. After several seconds the green main power light, HV drive light and external loop indicator lights should come on. The dryer power indicator should start blinking and one of the two dryer chamber indicator lights should be on. At this time none of the ten upper ozone output indicator lights will be on. They will be activated with the ozone generator by the time delay relay.

Startup Procedures on a Single Pass Fill System

1. The POE10/12 systems are shipped from ClearWater Tech with the time delay controller in the no delay position (no time indicated on the time delay relay). For initial adjustment of the venturi feed gas flow, it is recommended that one or more minutes be set to allow for venturi adjustment. In the single pass configuration it will be common for the system to be adjusted from one to three minutes.
2. After unplugging the POE unit, remove the cover from the time delay relay. Referring to the adjustments outlined in the time delay relay section, set the relay for one minute or more. Depending on your installation removal of the adjustment only if the POE unit is unplugged. Removal of this relay while the unit is plugged in may result in damage and will void the warranty. After setting one minute on the relay, plug the POE system in again.


Installation – Single (Straight) Pass Filling System

3. The POE10/12 systems are shipped from ClearWater Tech with the venturi water bypass valve and the feed gas control valve in the closed position. This is the correct position for initial startup.
4. Start the POE unit by engaging the time delay relay with the switching system chosen for your installation. When the switch activates the time delay relay, the POE system booster pump and ozone generator will turn on.
5. You will now have the time set on the time delay relay plus to adjust the venturi feed gas flow. Slowly open the feed gas flow valve at the vacuum break. This will cause water to rise in the vacuum break and dried air to flow in the SCFH gauge under the CD10AD/12AD ozone generator. Adjust the feed gas control valve until the SCFH gauge reads between 3-5 SCFH for CD10/AD and 6-8 SCFH for CD12/AD. Should water be drawn into the venturi, refill the vacuum break and recycle the system as necessary.

Operation


POE10 Unit Diagram

Figure 6

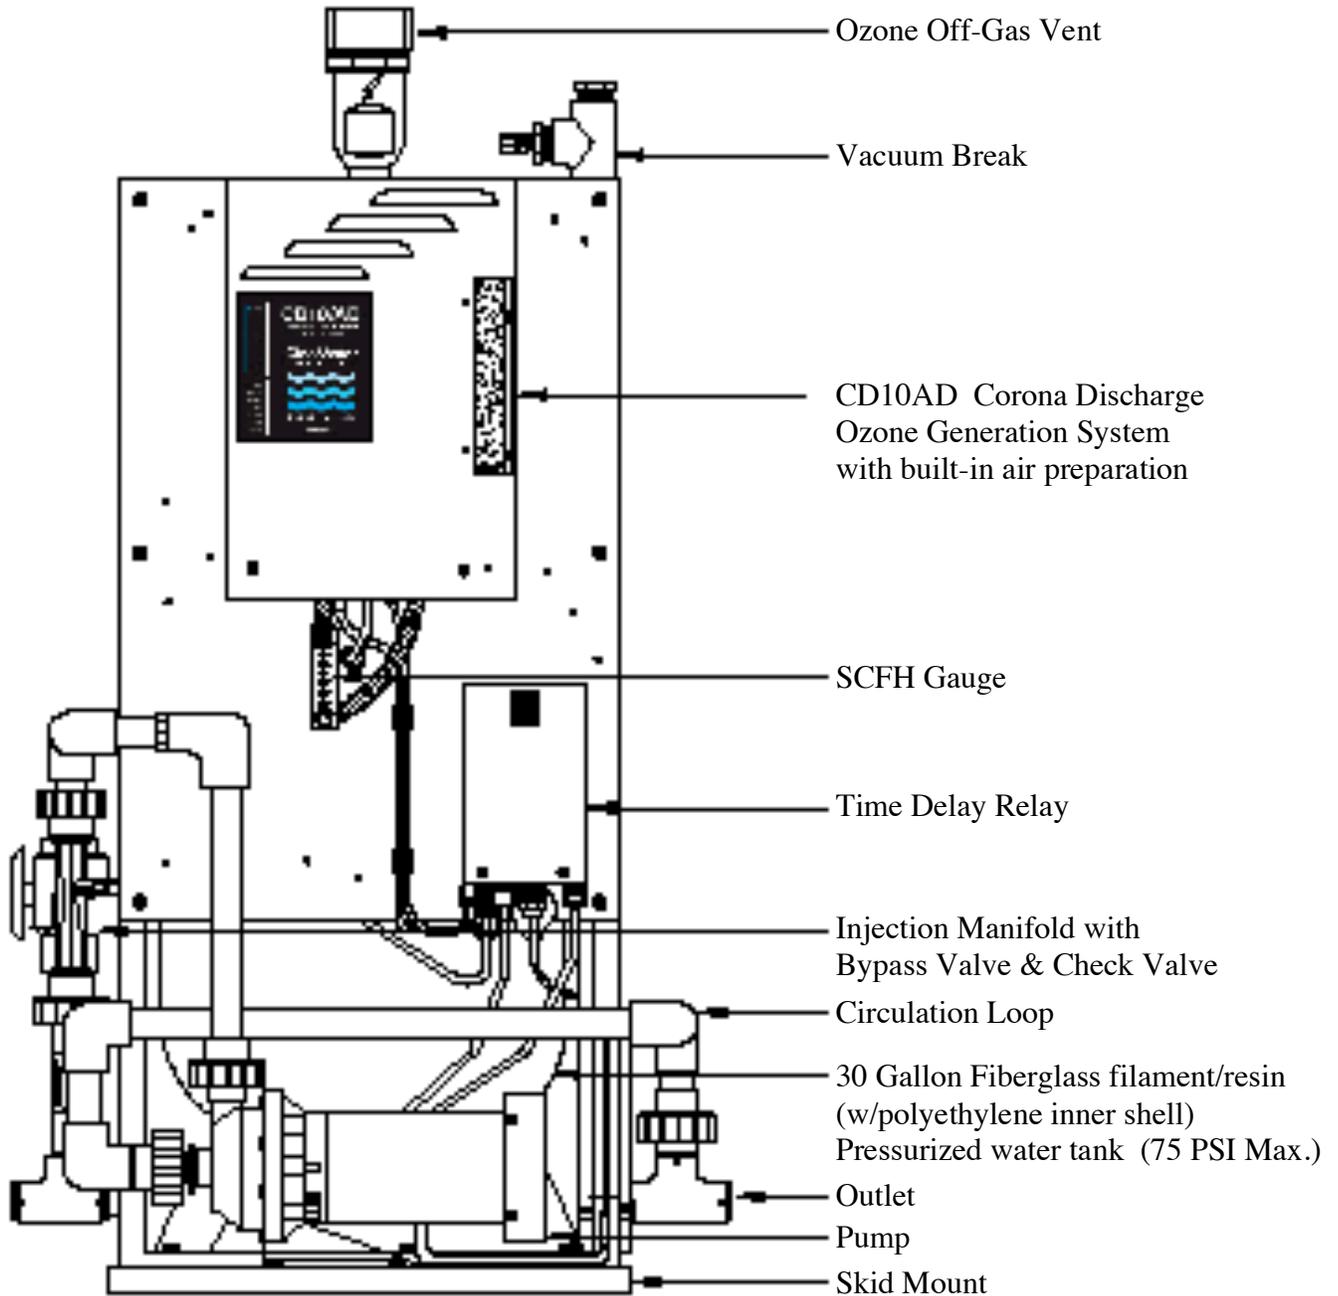

POE12 Unit Diagram

Figure 7

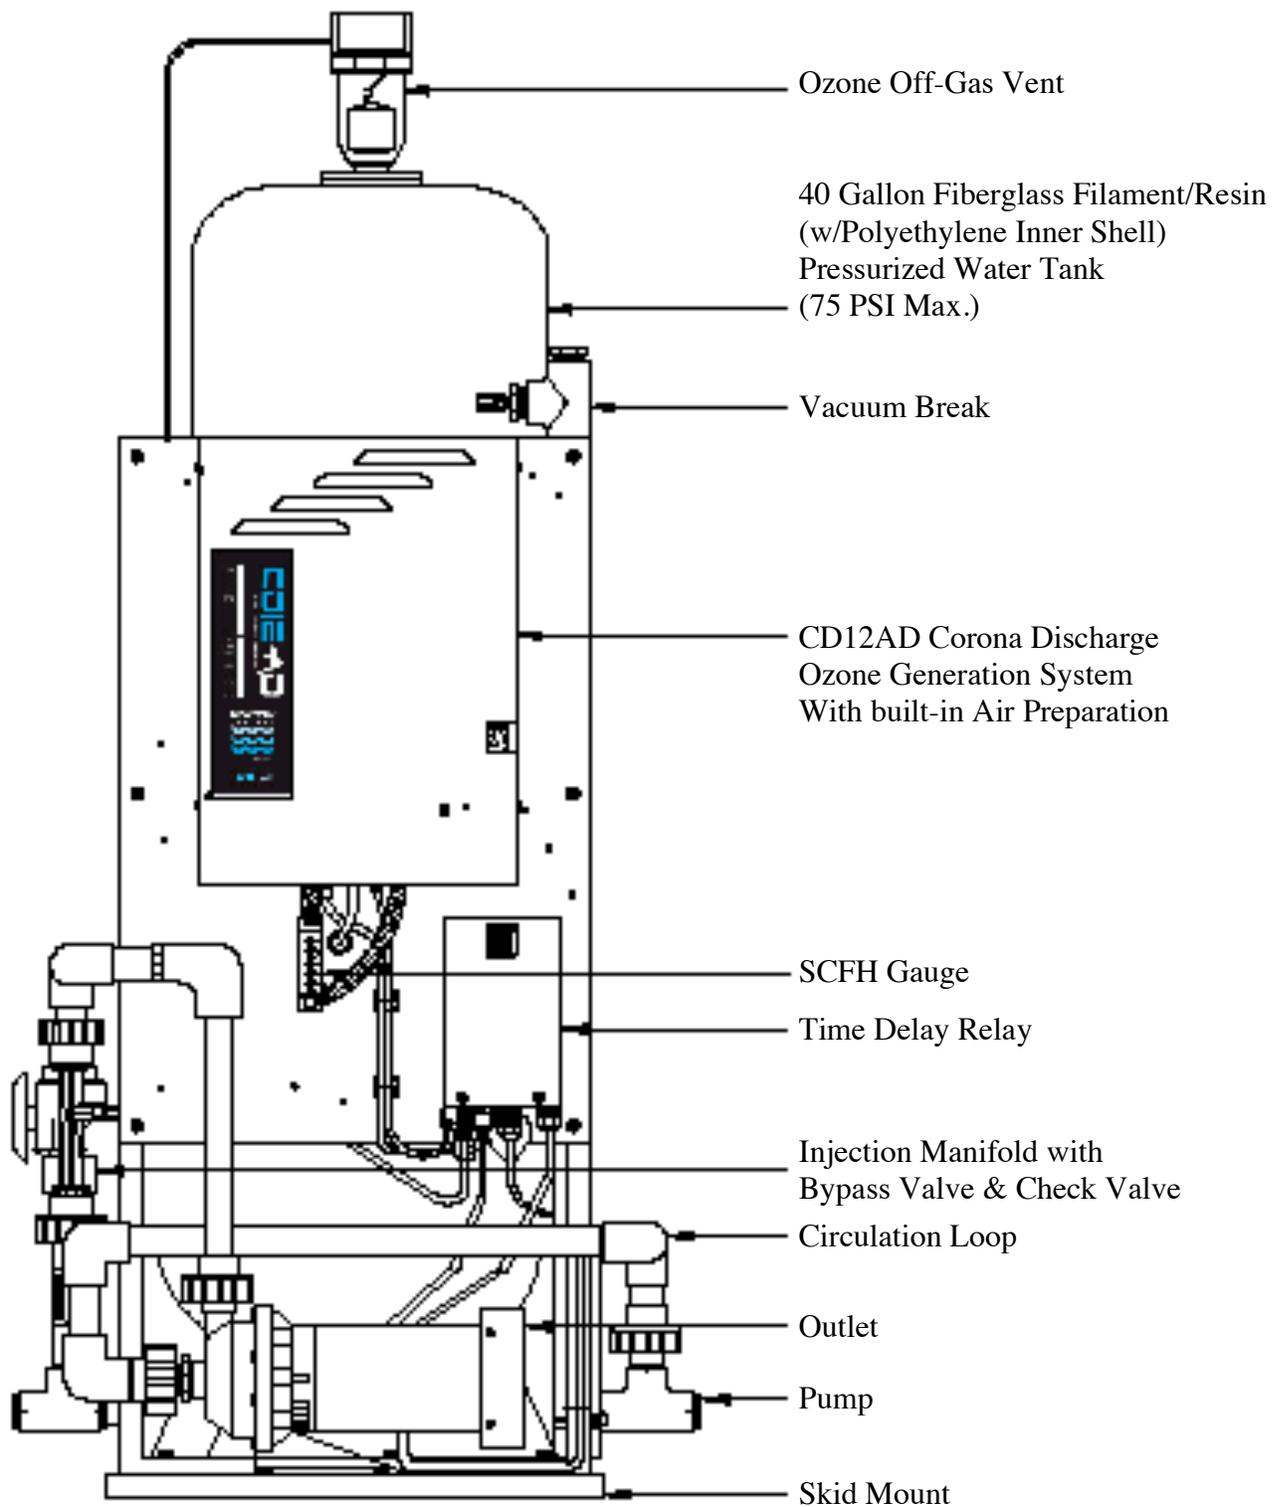

Time Delay Relay

The time delay control is adjusted by pushing in on the pins above or below the three place digital display. The red light in the upper right hand corner of the relay will blink when the time delay is engaged.

The range selector switch is factory set to the 999M position. This will allow the numbers set into the digital display to represent minutes. The function select switch is factory set to DOB (delay on break). This allows the timer to be controlled by the flow or pressure switch.

Main Power Cord

This 12/3 NEMA 5-15 120 volt power cord will allow the time delay control to handle up to a one horsepower pump. A dedicated 20 Amp circuit is recommended for this controller.

Dry Contact Relay Connector

This two position AMP® pin connector is for the exclusive use of the ClearWater Tech CD10AD/12AD. This enables the controller to actuate the ozone generator portion of the CD10/AD when the controller is engaged.

Remote Switch Connector

This three position AMP® pin connector is the connection point for a variety of switches used to activate the controller's contactors and time delay relay.

The two out terminals are the dry contact connection. This means that no power can be wired to these terminals. Any power connected at this point will result in damage to the controller which is not covered by the warranty. These wires can be attached to a flow switch, a set of dry contacts on a 24hr timer, a float switch or other dry contacts.


The single middle wire is for a single hot wire connection similar to the MCI (motor control interlock) used on the ClearWater Tech electrical interlock box. It requires a 120 volt AC single hot wire from a pressure switch, float switch or 24 hour time clock.

Dual NEMA Receptacle

Under the time delay controller is a dual weatherproof 5-15 NEMA (standard residential) receptacle. Looking at the unit from the bottom, the power cord is on the right side. The outlet on the right is switched by the internal contactor and controlled by the timer relay. This outlet is for connecting a recirculation or booster pump up to one horsepower. The outlet on the left is constantly ON for connection to the CD10/AD or CD12/AD. This will allow the air dryer portion of these units to be operating on a continuous basis while the ozone generator portion remains on standby.

Vacuum Break Diagram

Figure 8

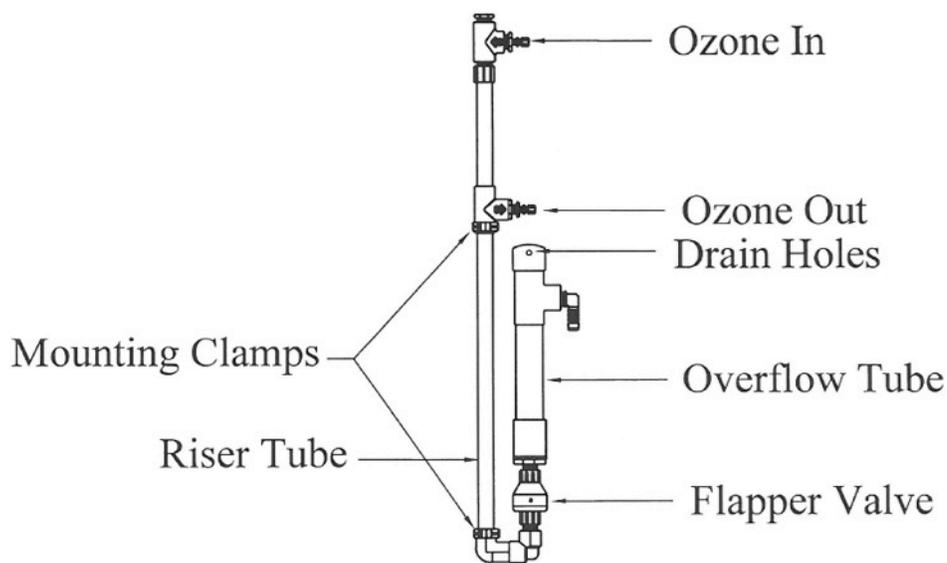

Ozone In

This is a 1/4" Kynar® compression fitting that connects to the ozone outlet on the CD10AD/12AD.

Ozone Out

This is a 1/4" Kynar® compression fitting on the feed flow adjustment valve, connecting to the Kynar® compression fitting on the venturi. The feed gas control valve regulates excess vacuum and gas flow from the venturi. The control valve may also be used to isolate the venturi should a check valve fail.

Riser Tube

This tube is the vacuum indicator, its height rather than its diameter determines the amount of vacuum created by the venturi that is passed through the feed gas control valve to the ozone generator.

Water Fill/Overflow Fitting

This 3/4" Schedule 80 PVC barb fitting doubles as water fill and overflow point. It is installed hand tight - the use of hand tools is unnecessary. Turn the fitting upright and fill to capacity. Turn the fitting facing downward and connect the provided 3/4" braided PVC tubing. This tubing must be connected to a safe drain observing all rules governing backflow and cross connection. Do not attempt to connect to any drain above the level of this fitting.

Overflow Tube

This clear acrylic reservoir contains double the amount of water necessary to fill the riser column. The water level must be maintained half way up the reservoir. Too little water in the reservoir will result in a loss of vacuum and air flow through the CD10AD/12AD ozone generator.

Time Delay Operation

The Time Delay Box is designed for well water use, to allow an ozone system to continue the ozonation process after the main well pump has turned off.

Operation:

- Set timer relay to the “Delay On Break” or “Off Delay” setting
- Set the desired time (typically set by minutes 999M). This set time will allow the switched outlet to have power and the Dry Contact Source to have continuity until the time has elapsed.
- Wire the Time Delay Box System Control Interface to a control source by either using a flow switch or any other normally-open non-voltage supplied switch to the two Brown/Blue wires or a 120VAC (TD100) or 220/240VAC (TD200) signal to the single black wire, located at the bottom of the Time Delay Box. One of these two options must be used to initiate power to the switch outlet. Once continuity is lost through the two Brown/Blue wires or voltage is lost to the Black wire the time delay sequence will begin.
- The 2-position Dry Contact source connector can be wired to the ozone generator External Loop. This Dry Contact source will have continuity through it when the Time Delay Box has a signal to the System Control Interface and while the time delay sequence is initiated. When continuity is present and wired to an External Loop, the ozone generator will initiate ozone production. When there is no continuity on this loop ozone production will be interrupted.
- Plug Main Power cord into a constant power outlet (TD100) or hard wire pig-tailed main power cord to main power (TD200), L1 – Black, N/L2 – White, and Ground – Green.

Time Delay Box – Inside View

Figure 9



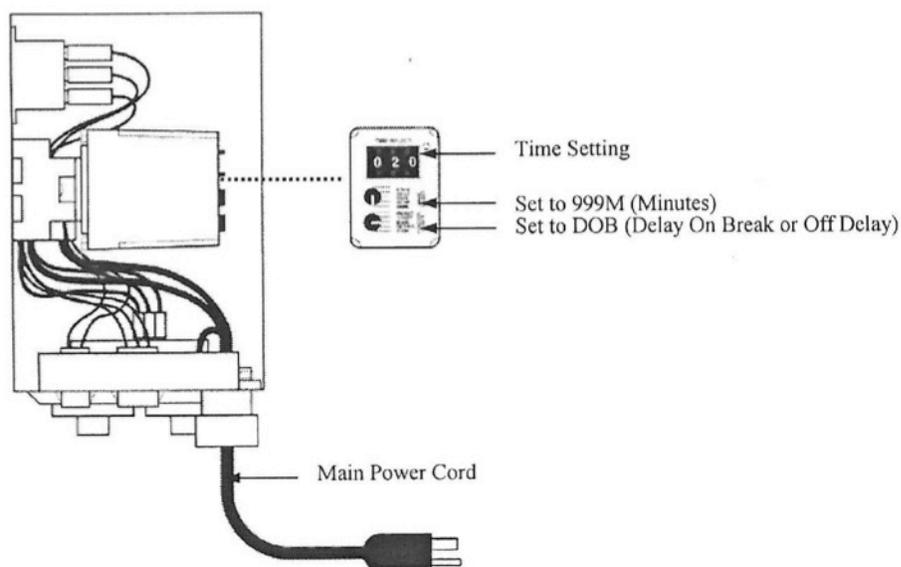


Figure: A

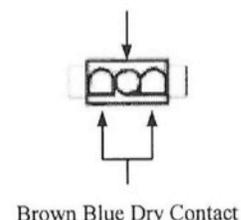

Time Delay Box – Front View

Figure 10

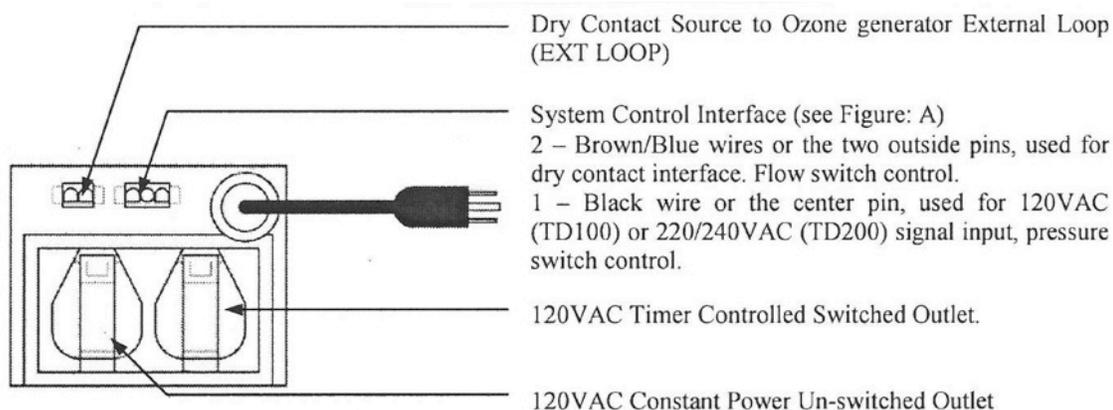

Apex Interface Box – AIF10 120VAC 60Hz and AIF20 220/240VAC 50/60Hz, 1 horsepower max.


The Apex Interface Box is designed to interlock both an ozone generator and oxygen concentrator. Typically a vacuum switch is used to sense vacuum from the venturi closing the relay within the AIF Box energizing the two outlets on the bottom of the box.

Operation:

- Plug both ozone generator and oxygen concentrator into the two outlets provided, no specific orientation (AIF10) or hard wire the ozone generator and oxygen concentrator main power cords to the terminal strip provided (AIF20).
- Wire to the relay connector at the bottom of the AIF Box, using a normally-open non-energized control device (vacuum, flow or float switch).
- Plug the main power cord into a constant power outlet (AIF10) or hard wire main power to the terminal strip provided (AIF20).

Apex Interface Box – Front View

Figure 11

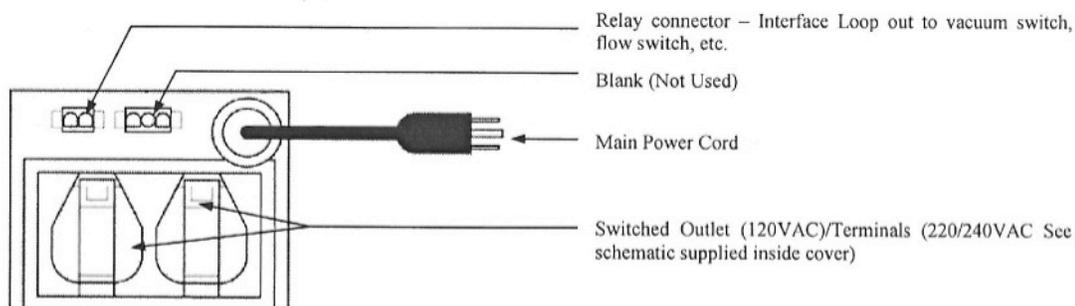

Setting The Time Delay on the POE10

During the recirculation period, the well pump is off and the booster pump is on, the booster pump circulates water from the contact tank through the injector and back to the contact tank at a flow rate of about 8 gpm. At 8 gallons per minute and the full ozone output of one gram per hour, the CD10/AD delivers 0.55 parts per million of ozone to the injector. About 0.50 ppm is actually absorbed by the water. Therefore, on each pass through the injector, we are adding 0.50 grams of ozone per gallon. There are 30 gallons in the contact tank. By dividing this volume (30 gallons) by the flow rate (8 gpm), we get a recycle time of 3.75 minutes. We have rounded this figure off to 4 minutes per cycle.

Stated simply, every four minutes during recycle you are adding 0.5 ppm of ozone to each gallon of water in the contact tank.

The quantity of iron, manganese or hydrogen sulfide in the water determines how much ozone we add. Thus, if each part per million (mg/l) of iron requires 0.43 ppm of ozone, manganese requires 0.88 ppm of ozone and hydrogen sulfide requires 1.0 ppm of ozone.

For example, if the water has 5 ppm of iron, multiply this number (5) by the ozone required in ppm (0.43), which yields 2.15 ppm ozone required to precipitate all the iron out of the water. Divide the total ozone required (2.15 ppm) by the amount of ozone added per cycle (0.5 ppm) to get the number of 4 minute cycles required (in this case, 4.3). Multiply this number (4.3) by 4 minutes to get the total number of minutes (17.2). This is the setting for the time delay. (Note: these are stoichiometric calculations - your actual times may vary.)

Disinfection requires a residual of 0.4 ppm of ozone. If you want disinfection as well as iron removal, run one more 4 minute cycle to add 0.5 ppm of ozone to the water to kill the bacteria and viruses. Total recycle time required thus equals 17.2 (from above) plus 4 more minutes, totaling 21.2 minutes. Rounding up to the next whole minute yields 22 minutes. For CD12/AD calculations use 1.0 ppm per 4 minute cycle.

Of course, these calculations are simplified. They provide a good starting point, but variations in water analysis, pressure, flow and temperature will also affect the time required. You may have to adjust your times up or down. This adjustment is easily made with the push of a button on the time delay relay to increase or decrease the amount of ozone in the water.

POE10 Timing Table

Figure 12

PPM	IRON	MAGANESE	HYDROGEN SULFIDE	DISINFECTION
1	4 min	7 min	8 min	4 min
2	7 min	14 min	16 min	
3	11 min	21 min	24 min	
4	14 min	28 min	32 min	
5	18 min			
6	21 min			
7	24 min			

Timing Examples

To remove 4 ppm of iron, set the timer to 14 minutes

To remove 4 ppm of iron and disinfect, set the timer to 18 minutes (14 + 4)

To remove 2 ppm of hydrogen sulfide and 1 ppm of iron, set the timer to 20 minutes (16 + 4)

Maintenance



Maintenance of the ozone system is critical to its longevity and operating efficiency. While all system components are built to provide years of reliable service with minimum maintenance, following the procedures outlined below is strongly recommended.

All maintenance procedures have been segmented by interval: daily, monthly, semi-annual and annual. Daily procedures involve quick, visual checks for changes in normal operating conditions. Monthly, semi-annual and annual procedures include cleaning and/or replacement of certain critical parts.

NOTES:

- **The ozone generator warranty states that it “does not extend to any product or part which has been damaged or rendered defective as a result of use of parts not sold by ClearWater Tech, or service or unit modification not authorized by ClearWater Tech” Please contact your ClearWater Tech dealer if you have any questions about any maintenance procedure before you begin that procedure.**
- **CAUTION: Observe all common safety practices and review the “Safety Warnings and Instructions” section before attempting any maintenance procedure that requires the use of tools and/or shutting down the ozone system.**

Daily Procedures

Ozone Generator

- Indicator Lights: Check the indicator lights on the ozone generator.
- Air Flow: Check the SCFH/vacuum gauge assembly attached to the ozone generator. Make sure air flow is within the SCFH range described in the installation section
- Vacuum: Check the SCFH/vacuum gauge assembly attached to the ozone generator. Make sure pressure is within the range described in the installation section

Vacuum Break

- Water Level: Check the water level in the vacuum break. Make sure it is up to the fill line. Fill as required by removing the threaded fitting on top of the riser tube until water is up to the fill level in the riser tube (see Figure 8).

Injection Manifold

- Check valve: Inspect the Teflon ozone delivery line that runs between the vacuum break and the check valve assembly on the suction port of the ozone injector manifold. If water is observed in the delivery line near the check valve assembly, the check valve has failed. See Troubleshooting Guide.

Ozone Destruct System

- Water Trap: Check water trap for excessive water. It should be no more than half full. If excessive water is observed, see Troubleshooting Guide.
- Ozone Destruct Unit: Check to make sure the power indicator light located on the right side of the unit is illuminated. Note: Unit must be plugged into an unswitched outlet. Cover of unit will be warm to the touch.


Monthly Procedures

Ozone Generator

- Cooling Fan Operation: Check to make sure the cooling fan mounted on the bottom panel of the ozone generator is operating. If not, refer to the Troubleshooting Guide.
- Cooling Fan Filters: Check the cooling fan filter element mounted on the fan assembly located at the bottom panel of the ozone generator and clean as required. Operating conditions in the equipment area will dictate the frequency required for this procedure. Remove the filter element and clean with soap and water, drying them completely before re-installing (see Figure 13).

Ozone Generator Cooling Fan Assembly

Figure 13

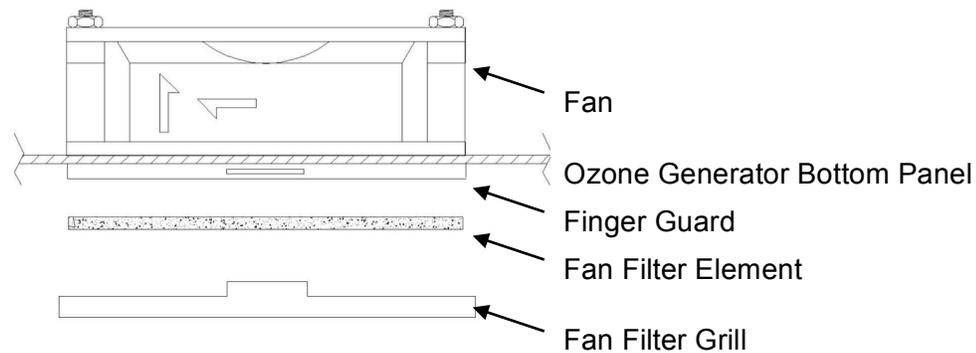

Booster Pump(s)

- Strainer Baskets: Check and clean the strainer basket in the booster pump (if so equipped) as required.

System Shutdown Procedures

CAUTION: The ozone generator operates at high voltages. Follow these steps carefully before performing any annual maintenance procedures.

- Step 1: Turn off power to any peripheral system hydraulic components and air prep system.
- Step 2: Turn the Main Power switch on the ozone generator to the “OFF” position. The LED display on the front cover should not be illuminated.
- Step 3: Disconnect the power to the ozone system either at the service disconnect box (if so equipped) or main circuit breaker.

Annual Procedures

CAUTION: Follow system shutdown procedures before performing any of the following steps.

Air Preparation System


Air Dryer: Replace sieve material according to the steps outlined below (see Figure 14). **CAUTION: Allow the air dryer chambers to cool completely before continuing with the following steps.**

- Step 1: Straighten out the ends of the dryer chambers.
- Step 2: Using a snap ring tool, remove the top snap rings.
- Step 3: Remove the top screens.
- Step 4: Using a snap ring tool, remove the bottom snap rings.
- Step 5: Remove the old sieve material from the dryer chambers and dispose. **Note: When removing the sieve material, be sure not to discard the bottom screens.**

- Step 6: Re-install the bottom screens. **Note: The heater rod must be put through the bottom screens.**
- Step 7: Fill chamber with new sieve material to 3/4" to 1" below the top of the dryer chamber.
- Step 8: Using a snap ring tool, place the bottom snap rings just above the top level of the new sieve material.
- Step 9: Re-install the top screens.
- Step 10: Using a snap ring tool, place the top snap rings snug against the top screen.
- Step 11: Bend the ends of the dryer chambers in-ward for added retention of the sieve material.
- Step 12: The CD10/AD and CD12/AD must be turned on for 24 hours prior to system start-up to eliminate any moisture trapped in the new sieve material.

CD10/AD and CD12/AD Heat Regenerative Air Dryer

Figure 14

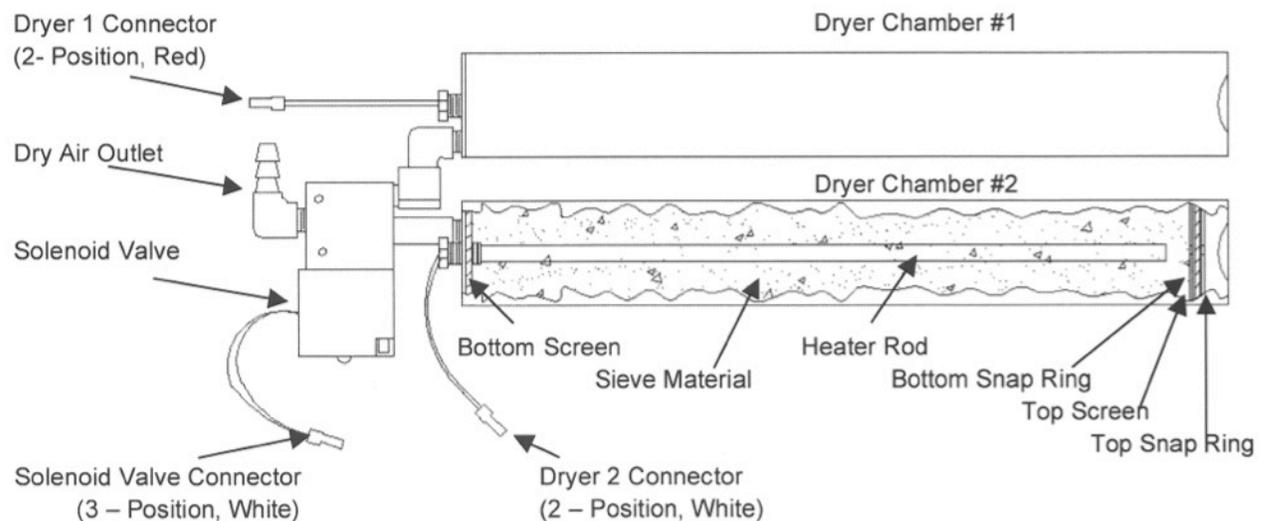

Ozone Generators

- Cooling Filters: Clean or replace the cooling fan filter elements as required.
- Inline Particulate Filter: Replace the inline particulate filter.
- Reaction Chambers: Remove and disassemble the reaction chamber according to the steps outlined below (see Figure 15). Check the chamber interior and dielectric tube for oil, dirt or moisture.

Reaction Chamber Removal and Disassembly

Note: Disassembly and service of the reaction chamber(s) is a technical, delicate and critical procedure. Please consult your ClearWater Tech dealer before attempting this procedure.

- Step 1: Make sure all power to the ozone generator has been disconnected according to the "System Shutdown Procedures" outlined above.
- Step 2: Disconnect the high voltage lead from the reaction chamber(s).
- Step 3: Remove reaction chamber from ozone generator.
- Step 4: Remove retaining screws and washers from the two end caps (3 each).
- Step 5: Using a gentle back-and-forth twisting motion, remove the non-high voltage end cap (the one without the high voltage attachment screw) from the heat sink/cathode assembly. Note: Orientation of the end cap on the heat sink/cathode assembly.
- Step 6: Remove the high voltage end cap and dielectric from the heat sink/cathode assembly. Note: Orientation of the end cap on the heat sink/cathode assembly. Remove end cap and contact brush

from dielectric glass anode.

Step 7: With contact brush attached, remove the brush adapter nut from the high voltage end cap.

Step 8: Inspect the dielectric, end caps and cathode for breakage, corrosion or debris, and then follow the assembly and re-installation steps below.

Reaction Chamber Assembly and Re-installation:

Step 1: Make sure the glass dielectric is clean (free of dust, dirt, grease, oils, etc.).

Step 2: Prepare the end caps for re-assembly by replacing the O-rings. Thread the hex brush adapter nut, with contact brush attached, onto the end of the high voltage end cap (cap with the high voltage attachment screw) center screw.

Step 3: Using a gentle twisting motion, press the non-high voltage end cap onto the heat sink/cathode assembly until flush with the heat sink cooling fins. Note: Correct orientation of end cap.

Step 4: Slide the three end cap retaining screws with washers through the holes in the non-high voltage end cap, aligning them with the heat sink screw bosses. Thread screws into screw bosses until heads are snug against the end cap.

Step 5: Slide the dielectric into the heat sink/cathode assembly. Seat the dielectric into the O-rings of the non-high voltage end cap by applying pressure with a gentle twisting motion. There must not be any dirt, debris, oils or fingerprints on the dielectric upon re-installation.


Step 6: Slowly insert the high voltage end cap assembly into the dielectric. Note: Do not bend center wire of the brush during this procedure. It is normal for the bristles to bend flat against the dielectric glass. Using a gentle twisting motion, press the high voltage end cap onto the heat sink/cathode assembly until flush with the heat sink cooling fins. Note: Correct orientation of end cap.

Step 8: Slide the three end cap retaining screws with washers through the holes in the end cap, aligning them with the heat sink screw bosses. Thread screws into screw bosses until heads are snug against the end cap.

Step 9: Re-install complete reaction chamber assembly into the ozone generator by following the "Removal and Disassembly" instructions in reverse order, from Step 5 to Step 2. Follow steps outlined in Chapter 7, "Start-Up and Calibration" to re-start the ozone system.

CD10/AD and CD12/AD 1" Reaction Chamber – Exploded View

Figure 15

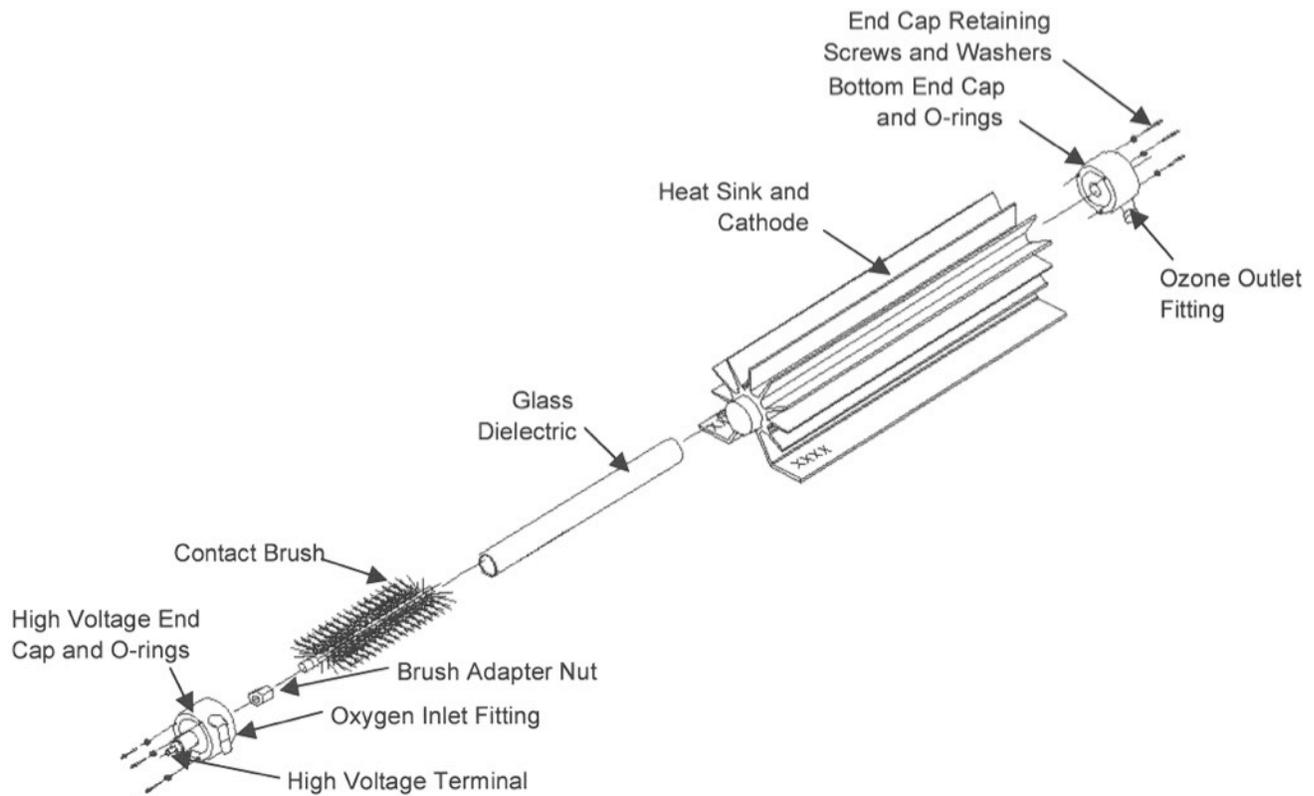

Vacuum Break

- **Cleaning:** Disconnect ozone delivery lines. Remove the vacuum break from mounting clamps. Disconnect the overflow tube from flapper valve, open flapper and clean the seat with a soft cloth. Remove riser tube threaded fitting and flush riser tube with water. Re-assemble and re-install vacuum break, making sure to add water to correct level.

Injector Manifold

- **Check Valve:** Replace the check valve located at the ozone injection manifold. Note: Because the system is in the shutdown mode, no vacuum is present at the injector. Therefore, it is normal for some water to be flowing from the injector during this procedure.

Contact Vessel

Cleaning, Contact Column only: Inspect the diffuser slots at the top of the contact column riser tube. If they are clear, no further maintenance is required. If the slots are fouled, disassemble the column and clean as required, following the steps outlined below.

Step 1: Make sure the isolation valves before and after the contact column(s) are closed.

Step 2: Disconnect the vent line from the top of the contact column(s).

Step 3: Remove the bolts in the 6" base flange.

Step 4: Remove the column, lifting it over the interior riser tube.

Step 5: Remove and clean the diffuser.

Step 6: Inspect the flange gasket and replace if necessary.

Step 7: Reassemble the contact column and attach vent lines.

Ozone Destruct System

- Off-Gas Vent: Disconnect tubing from top of off-gas vent and remove vent from contact vessel. Disassemble vent and clean inside thoroughly. The float assembly maybe disassembled cleaned, making sure all ports and orifices are clean and free of debris. Clean O-rings or replace as required. Re-assemble and mount vent onto the contact vessel.
- Ozone Destruct Unit: Under normal operating conditions, this unit may require no annual maintenance. However, if a strong odor of ozone can be detected in the air immediately surrounding the unit, the catalyst may require replacement. Follow the directions included with the ozone destruct rebuild kit

Troubleshooting

Air Preparation – Heat Regenerative Dry Air

Problem/Symptom	Possible Cause	Solution
Air Prep LED not flashing	<ul style="list-style-type: none"> • Air dryer board not functioning 	<ul style="list-style-type: none"> • Replace air dryer board
Dryer 1 or 2 LED not illuminated	<ul style="list-style-type: none"> • Air dryer board not functioning • Dryer 1 LED will not illuminate when Dryer 2 LED is illuminated • Dryer 1 is in cool down mode • Dryer 2 LED will not illuminate when Dryer 1 LED is illuminated • Dryer 2 LED is in cool down mode 	<ul style="list-style-type: none"> • Replace air dryer board • See “Theory of Operation and Product Description - Air Preparation System”
Dryer chamber(s) not heating	<ul style="list-style-type: none"> • Heating element not functioning 	<ul style="list-style-type: none"> • Replace Heating element
Indicating desiccant cartridge has changed from blue & white to all pink or white. Moisture has entered air prep system.	<ul style="list-style-type: none"> • Unit does not have constant power • Excessive air flow • Excessive duty cycle • Excessive relative humidity • Solenoid valve not operating • Air dryer board not functioning 	<ul style="list-style-type: none"> • Unit must have constant power • Adjust flow meter • Duty cycle must not exceed 10 hours in a 24 hour period • Relative humidity must not exceed 75% • Replace solenoid valve • Replace air dryer board

Ozone Generator

Problem/Symptom	Possible Cause	Solution
LED display is not illuminated	<ul style="list-style-type: none"> • No power to unit • Main power switch is in the “OFF” position • Blown fuse(s) • Incorrect wiring • LED display board ribbon cable is disconnected from output control board 	<ul style="list-style-type: none"> • Check circuit breakers • Turn switch to the “ON” positioning • Replace fuse(s) • See “Installation” • Connect ribbon cable (be sure all of the pins are properly inserted into the output control board)
‘Main Power’ LED is not illuminated, but all other LED’s are illuminated	<ul style="list-style-type: none"> • LED display board is inoperable 	<ul style="list-style-type: none"> • Replace LED display board
Circuit breaker trips	<ul style="list-style-type: none"> • Incorrect wiring • Circuit breaker amperage does not match draw • Unit flooded with water 	<ul style="list-style-type: none"> • See “Installation” • Replace with correct circuit breaker • Assess damage, correct cause and rebuild as required
‘HV Drive’ LED is not illuminated	<ul style="list-style-type: none"> • No power to the high voltage drive board 	<ul style="list-style-type: none"> • Check board to be sure it is attached securely to the mother board • Bad high voltage drive board, replace as required
‘External Loop’ LED is illuminated	<ul style="list-style-type: none"> • The external loop does not have continuity 	<ul style="list-style-type: none"> • See “Installation” for function
‘Ozone Output’ LED’s are not illuminated	<ul style="list-style-type: none"> • The manual 0-100% output potentiometer is set to 0% output • Remote 4-20mA controller is sending a 4mA signal, which will indicate 0% output 	<ul style="list-style-type: none"> • Adjust potentiometer clock wise to desired set point • No solution required, controller will adjust LED’s automatically

Ozone Generator - Continued

Problem/Symptom	Possible Cause	Solution
'Hi Temp' LED illuminated	<ul style="list-style-type: none"> • Unit is overheating 	<ul style="list-style-type: none"> • Check fan for proper operation and clean fan filter • Check operating temperature • See "Installation – Getting Started, Equipment Placement"
Internal Mother Board 'Power' LED not illuminated	<ul style="list-style-type: none"> • No power to mother board • Inoperable mother board • -Blown mother board fuse 	<ul style="list-style-type: none"> • See "Installation" • Replacement Mother Board • Replace fuse
Receive an electrical shock upon touching the unit	<ul style="list-style-type: none"> • Incorrect wiring • Unit not grounded • Unit flooded with water 	<ul style="list-style-type: none"> • See "Installation" • Ground unit according to local codes • Assess damage, correct cause and rebuild as required
Fan not operating	<ul style="list-style-type: none"> • Debris caught in fan • Fan inoperable 	<ul style="list-style-type: none"> • Remove debris • Replace fan
Low air flow or no air flow	<ul style="list-style-type: none"> • -Air leak 	<ul style="list-style-type: none"> • Check all fittings, tighten as required
Low vacuum	<ul style="list-style-type: none"> • Hydraulics/Pneumatics out of adjustment • Defective check valve(s) • No water in vacuum break • Defective O-ring seals in reaction chamber(s) • Loose internal fittings • Defective dielectrics 	<ul style="list-style-type: none"> • See "Installation" • Back wash filter (if so equipped), look for obstruction through the ozone loop. • Replace check valves • Fill vacuum break with water – See "Operation" • Check & Replace as required • Check all fittings, tighten as required • Check & replace as required
High vacuum	<ul style="list-style-type: none"> • Hydraulics/Pneumatics out of adjustment • Change in hydraulics – excessive water flow through ozone injector 	<ul style="list-style-type: none"> • See "Installation" • See "Installation"
Unit flooded with water	<ul style="list-style-type: none"> • Defective check valve(s) • No vacuum break • Vacuum break flapper valve stuck • Hydraulics out of adjustment 	<ul style="list-style-type: none"> • Assess damage, repair as required, replace check valve(s) • -Repair unit as required and install Vacuum break • -See "Maintenance Procedures- Annual, Vacuum Break" • -See "Installation"

Ozone Generator - Continued

Problem/Symptom	Possible Cause	Solution
Ozone smell detected from or near ozone generator	<ul style="list-style-type: none"> • Insufficient vacuum at venturi • -Loose internal fittings • -Defective O-ring seals in reaction chamber(s) • -Defective dielectrics 	<ul style="list-style-type: none"> • -Adjust injector See “Installation” • -Check all fittings, tighten as required • -Check & replace as required • -Check & replace as required

Ozone Injection/Contacting


Problem/Symptom	Possible Cause	Solution
Water backflow past injector check valve	<ul style="list-style-type: none"> • Defective check valve 	<ul style="list-style-type: none"> • Replace check valve
Water bubbling in vacuum break	<ul style="list-style-type: none"> • Insufficient vacuum at venturi • Debris on seat of vacuum break flapper valve 	<ul style="list-style-type: none"> • See “Installation” • Clean seat of flapper. See “Maintenance Procedures – Annual”
No vacuum at venturi inlet port	<ul style="list-style-type: none"> • Ozone injector out of adjustment • Low water flow through ozone injector • Back pressure in hydraulic line • Booster pump not functioning properly 	<ul style="list-style-type: none"> • See “Installation” • Check for obstructions upstream of ozone injector • Check for obstructions downstream of ozone injector • Check booster pump (contact dealer)
Ozone smell detected around vacuum break or ozone injector	<ul style="list-style-type: none"> • Insufficient vacuum at venturi • Loose fittings 	<ul style="list-style-type: none"> • See “Installation” • Check all, tighten as required

Ozone Destruct

Problem/Symptom	Possible Cause	Solution
Excessive water in water trap	<ul style="list-style-type: none"> • Failed off gas vent • Failed spring check valve in water trap • Back pressure on drain line 	<ul style="list-style-type: none"> • Clean vent or replace as required • Replace water trap • Remove back pressure
Ozone destruct unit not operating	<ul style="list-style-type: none"> • No power to unit • Switch not “ON” • Fuse blown • Incorrect wiring connections 	<ul style="list-style-type: none"> • Check main power to unit • Turn switch to “ON” position • Replace fuse • See “Installation”
Ozone destruct unit trips circuit breaker	<ul style="list-style-type: none"> • Incorrect wiring • Incorrect circuit breaker • Water break flow into unit 	<ul style="list-style-type: none"> • See “Installation” • Replace with correct circuit breaker • Assess damage and rebuild as needed
Ozone destruct indicator lights not on	<ul style="list-style-type: none"> • Lamp burned out • Switch not “ON” • Blown fuse • Incorrect wiring 	<ul style="list-style-type: none"> • Replace lamp • Turn switch to “ON” position • Replace fuse • See “Installation”
Receive an electrical shock from ozone destruct	<ul style="list-style-type: none"> • Incorrect wiring • Unit not grounded • Unit flooded with water 	<ul style="list-style-type: none"> • See “Installation” • Ground unit according to local codes • Assess damage, correct cause and rebuild as required


Appendix A – Specifications

POE10

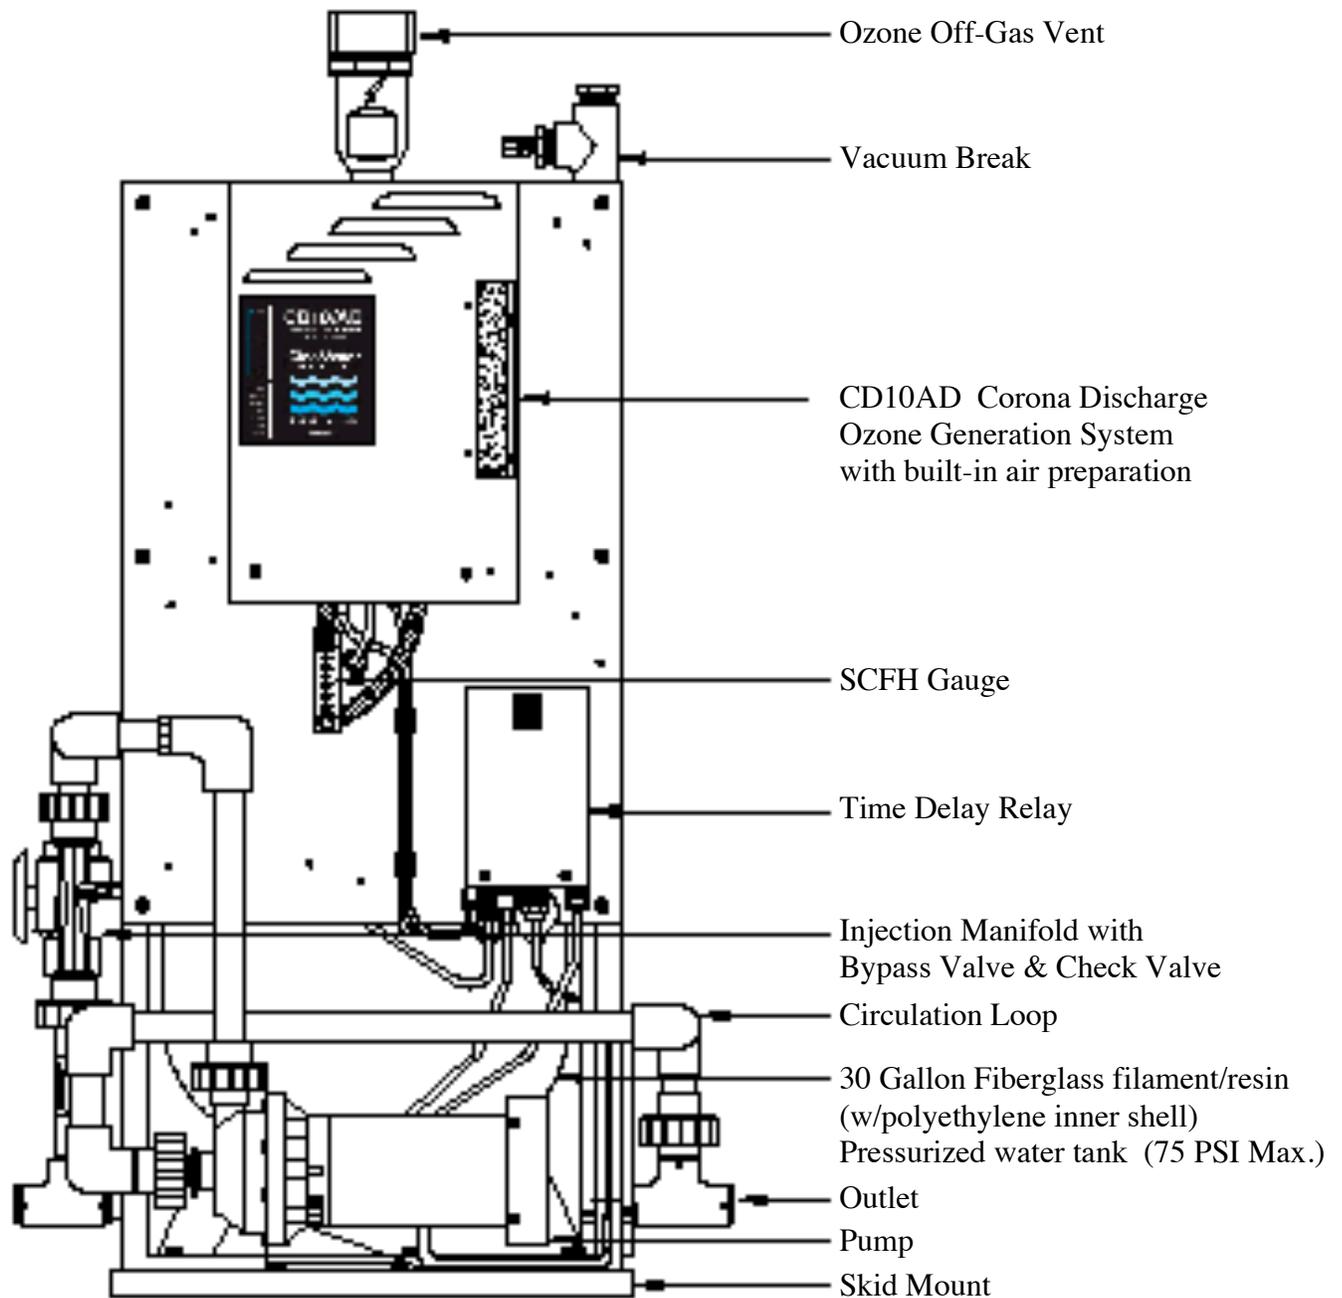


System	Specifications	Ozone Output/SCFH
POE10	68" h x 29" w x 29" d, 200 lbs	1.3 grams/hr @ 4 SCFH (dry air)

POE12

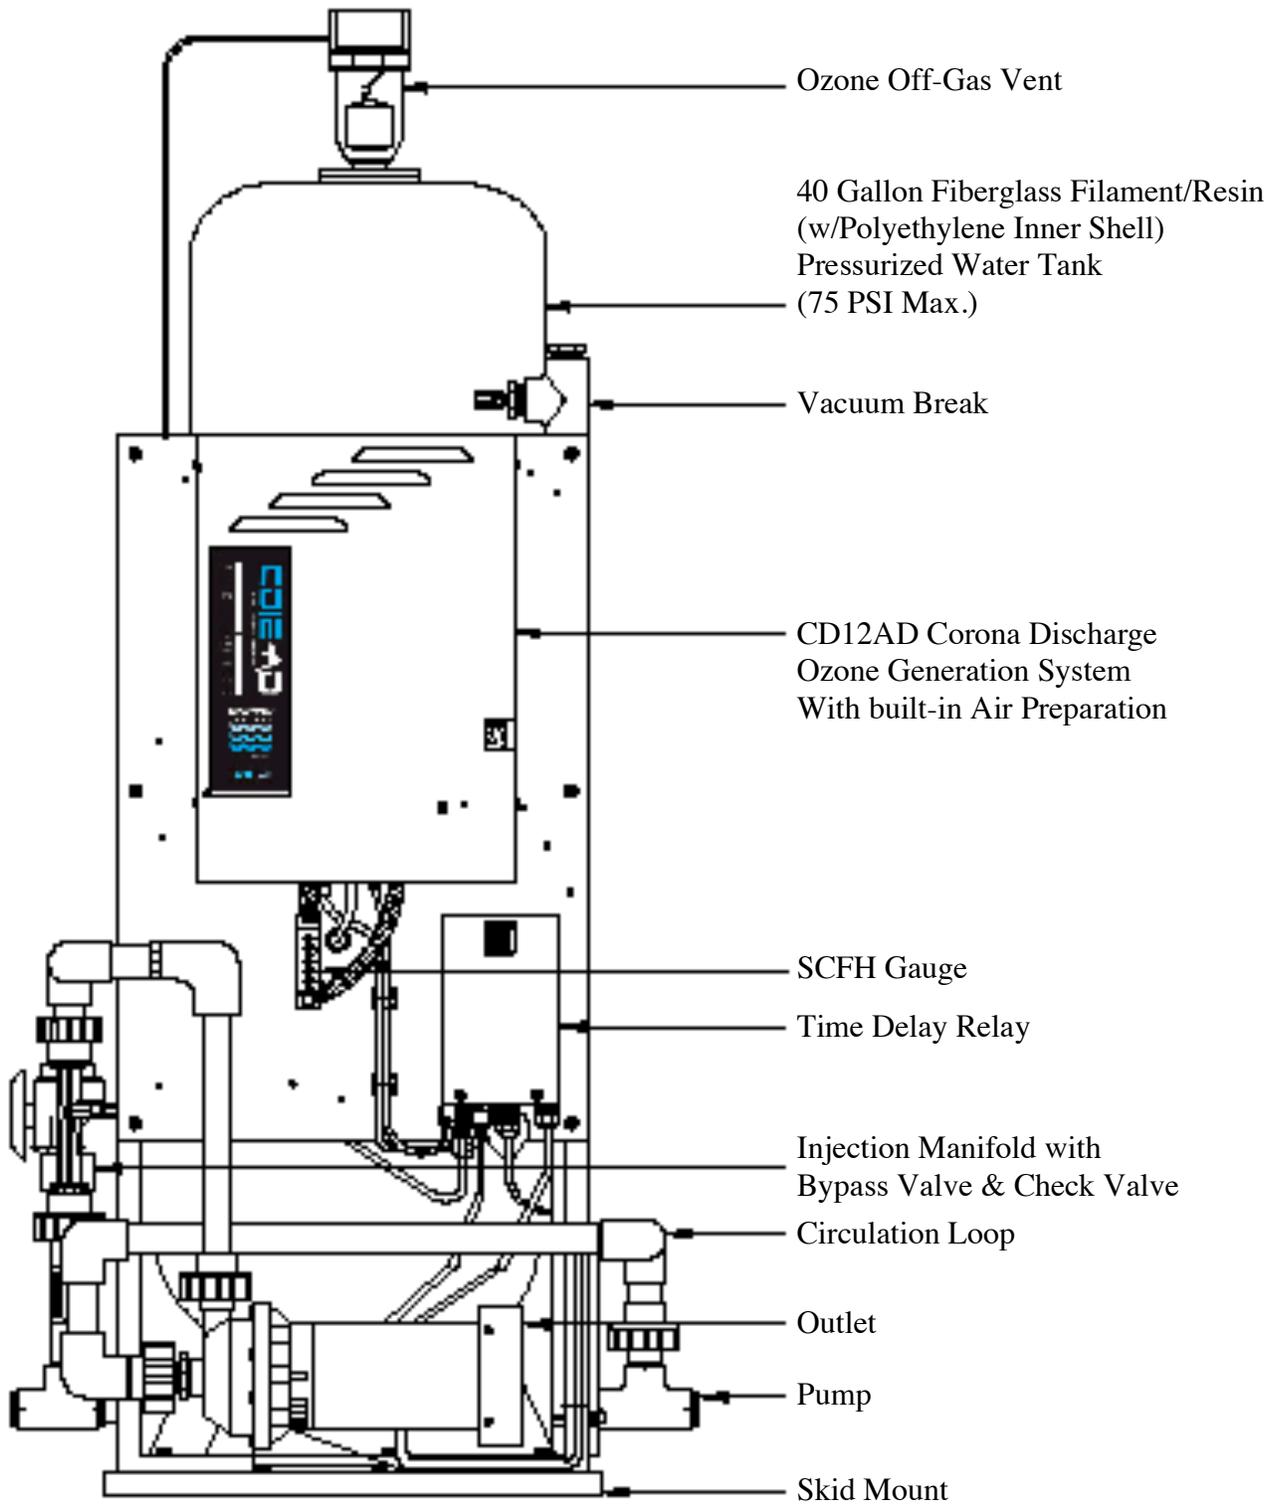

System	Specifications	Ozone Output/SCFH
POE12	68" h x 29" w x 29" d, 200 lbs	2.6 grams/hr @ 8 SCFH (dry air)


CD10/AD

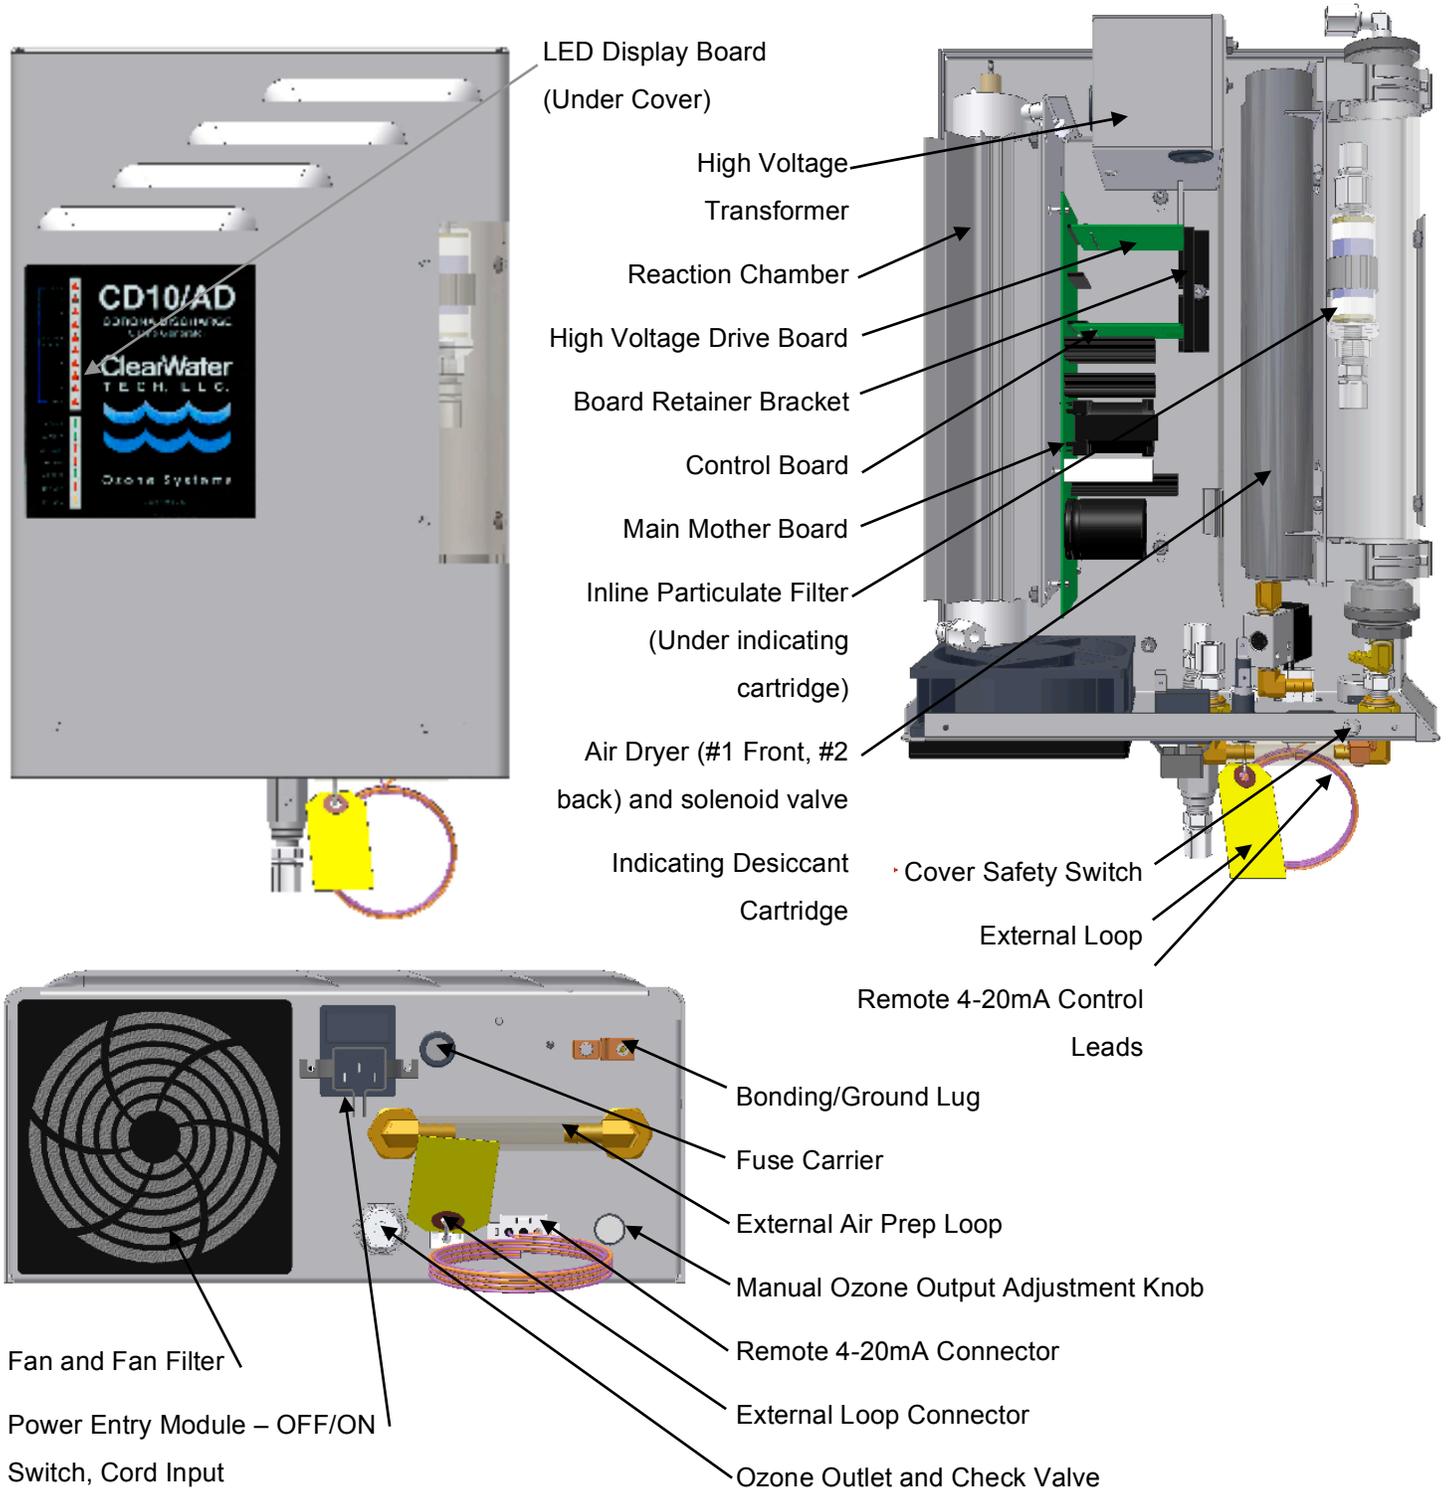

Shown: ClearWater Tech CD10/AD Ozone Generator (Wire harness omitted for clarity)

System	Specifications	Ozone Output/SCFH
CD10/AD	19" h x 11.5" w x 5" d, 14.5 lbs	1.3 grams/hr, 1% @ 4 SCFH
Mounting Hole Measurement	13" h x 13.5" w	

CD12/AD

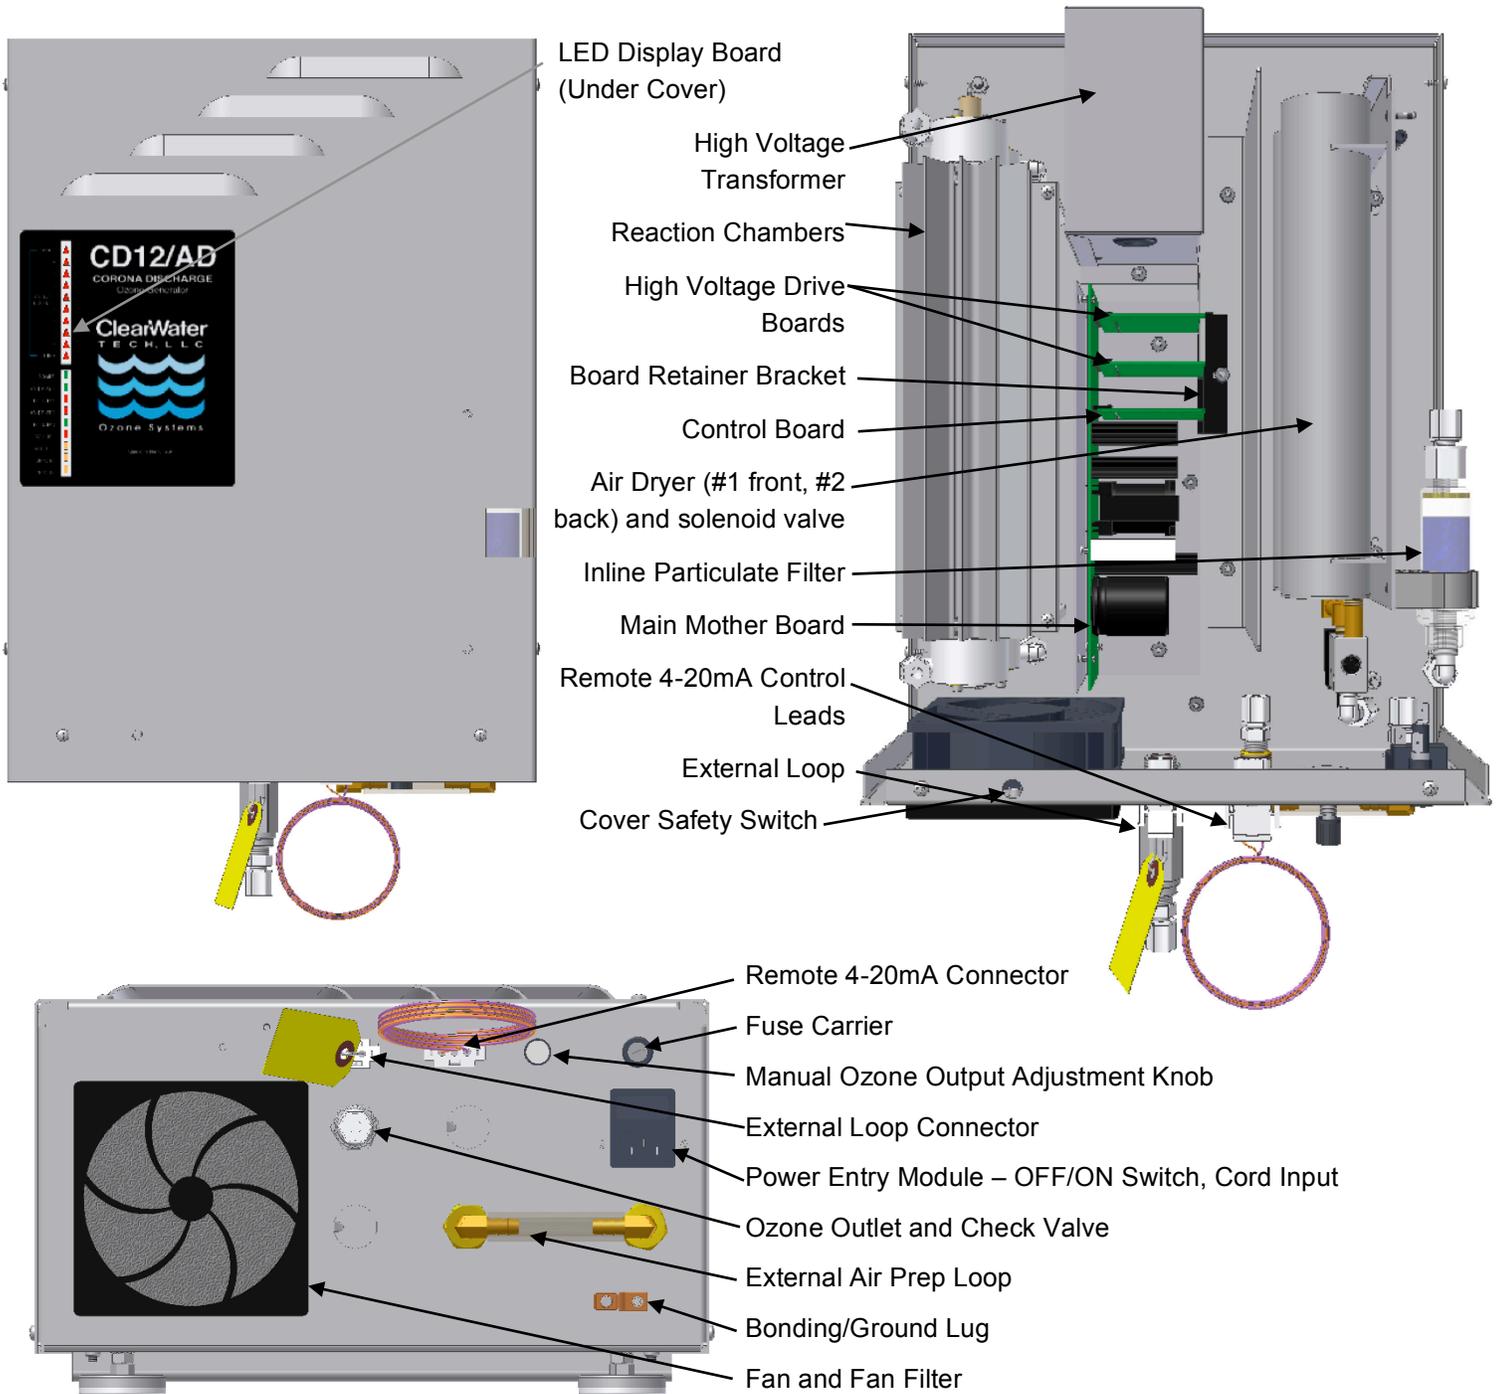

Shown: ClearWater Tech CD12/AD Ozone Generator (Wire harness omitted for clarity)

Ozone Generator	Specifications	Ozone Output/SCFH
CD12/AD	22”h x 13.5”w x 8.25”d, 20 lbs	2.6 grams/hr, 1% @ 8 SCFH
Mounting Hole Measurement	Z-Bar Mount	

Appendix B – Parts List

Air Preparation System

Description	Part Number
Complete Air Dryer Assembly	ADP100
Air Dryer Heating Rod	ADP20
Solenoid Valve, 3-way, 24VDC	SV220
Indicating Desiccant Refill	DES16
Dryer Sieve Desiccant Refill	DES12
Dryer Media Screen, Small	SCN20
Dryer Media Screen, Large	SCN30
Dryer Media Retaining Ring	HDW137
Dryer Chamber Retaining Spring	SPG110

Ozone Generator

Description	Part Number
Reaction Chamber – Complete	RCC17
Dielectric Anode 1”	RCC76
Non-High Voltage End Cap	RCC57
High Voltage End Cap	RCC53
O-ring Set	ORS50
Mother Board	CCA1325
Control Board	CCA1232
LED Display Board – CD12/AD	CCA1350
High Voltage Drive Board – CD10, CD10/AD, CD12, CD12/AD	ELPC5040
High Voltage Drive Board – CD12, CD12/AD	ELPC5042
LED Display Board – CD10	ELPC5054
LED Display Board – CD10/AD	ELPC5050
LED Display Board – CD12	ELPC5052
Complete Board Set – CD10	ELPC5064
Complete Board Set – CD10/AD	ELPC5060
Complete Board Set – CD12, CD12/AD	ELPC5062
High Voltage Transformer – CD10, CD10/AD	ELTR100
High Voltage Transformer – CD12, CD12/AD	ELTR105
Check Valve – 1/4fpt X 1/4mpt	CKV22
Cooling Fan	FA47
Cooling Fan Filter	FA40
Inline Particulate Filter	FLT34
Fuse, Bussmann MDL-5 5 amp, 250VAC Slow Blow, Main Power	FUS20
Fuse, Littlefuse 239003 – 3 amp, 250VAC Slow Blow, Mother Board	FUS15

Appendix C – Maintenance Kit

Air Preparation System


ASP110B – Maintenance Kit – CA10/AD Ozone Generator		
Part Number	Quantity	Description
FA40	1	Filter – Cooling Fan Filter
FLT34	1	Filter – Inline Particulate Filter
ORS50	1	O-Ring Set
CKV22	1	Check Valve – 1/4fpt X 1/4mpt
DES16	1	Indicating Desiccant Refill
DES12	1	Dryer Sieve Desiccant Refill
FUS20	5	Fuse, Bussmann MDL-5 – 5 amp, 250VAC Slow Blow, Main Power
FUS15	1	Fuse, 3A, 250VAC Slow Blow, 5X20mm

Ozone Generator

ASP115A – Maintenance Kit – CD12/AD Ozone Generator		
Part Number	Quantity	Description
FA40	1	Filter – Cooling Fan Filter
FLT34	1	Filter – Inline Particulate Filter
ORS50	2	O-Ring Set
CKV22	1	Check Valve – 1/4fpt X 1/4mpt
DES16	1	Indicating Desiccant Refill
DES12	1	Dryer Sieve Desiccant Refill
FUS20	5	Fuse, Bussmann MDL-5 – 5 amp, 250VAC Slow Blow, Main Power
FUS15	1	Fuse, 3A, 250VAC Slow Blow, 5X20mm


Appendix D – Logic Schematics

CD10/AD

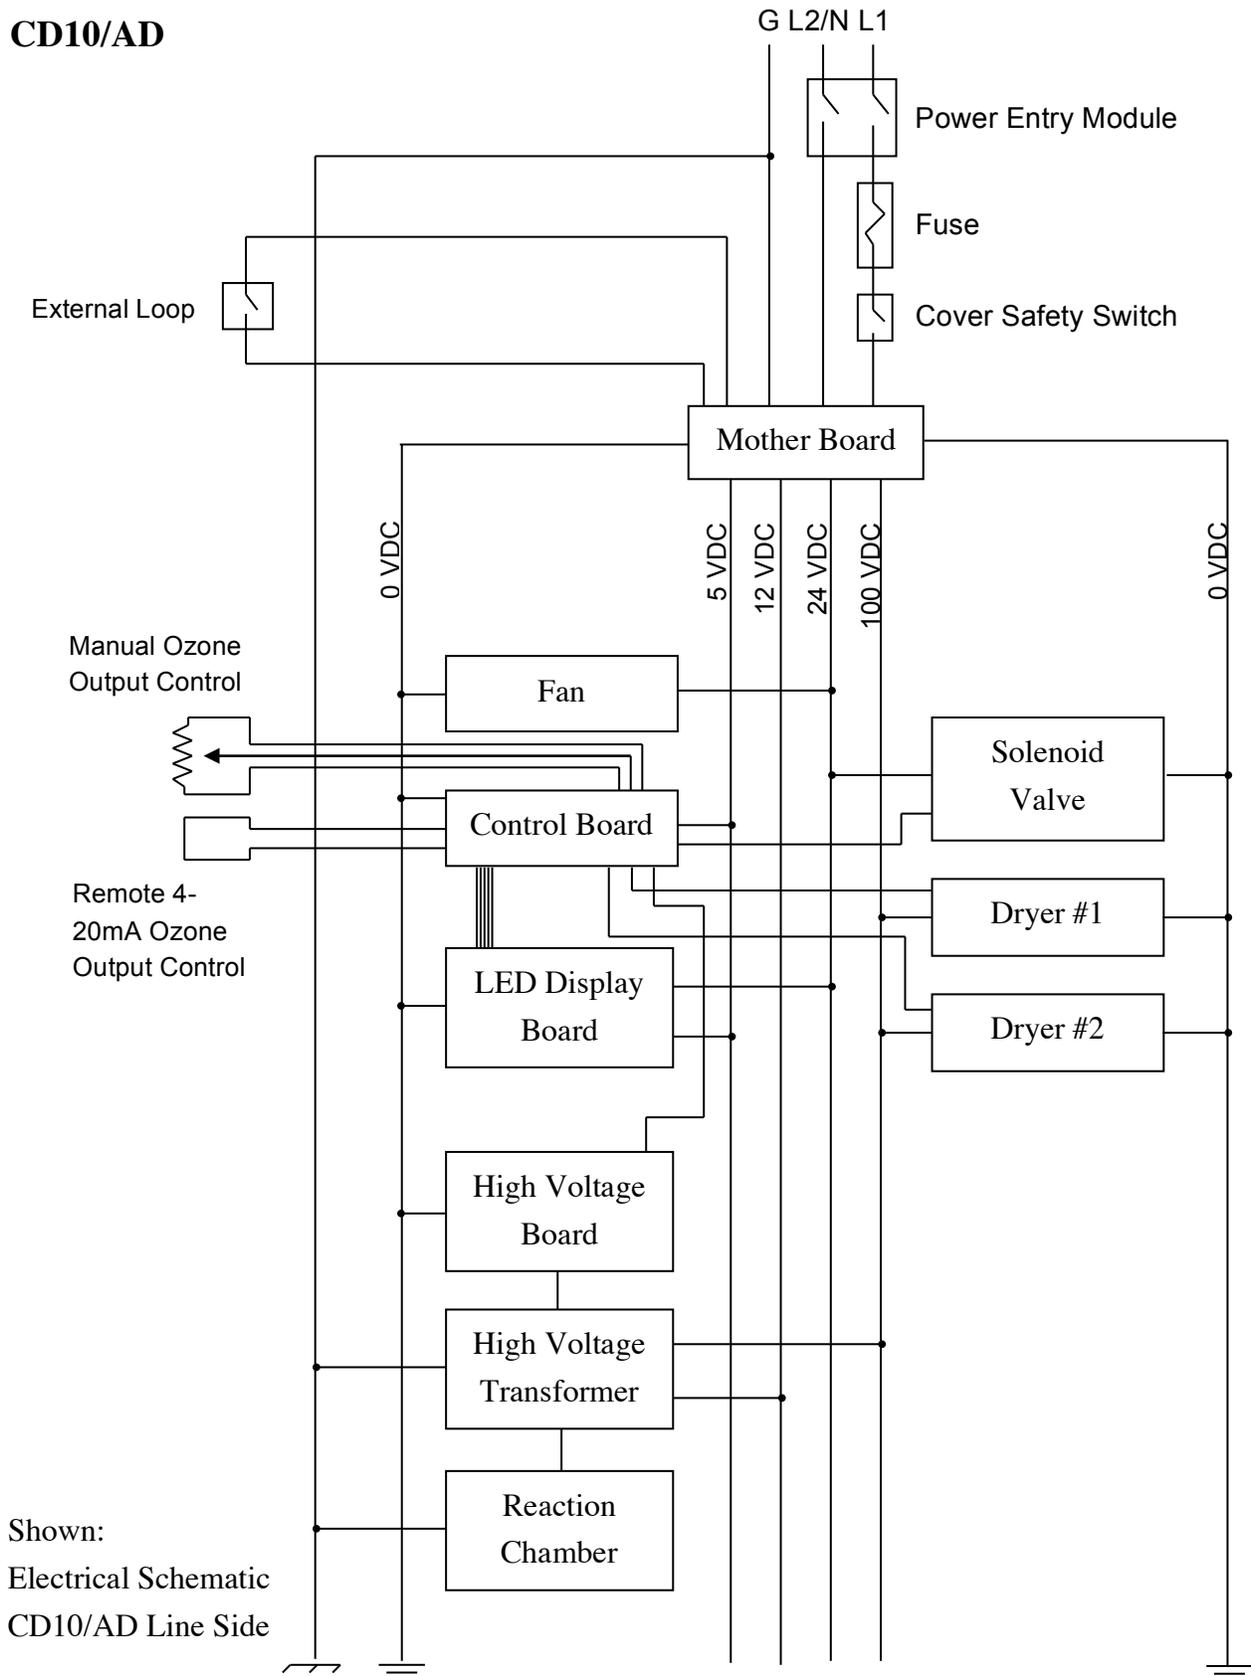

Shown:
Electrical Schematic
CD10/AD Line Side

CD12/AD

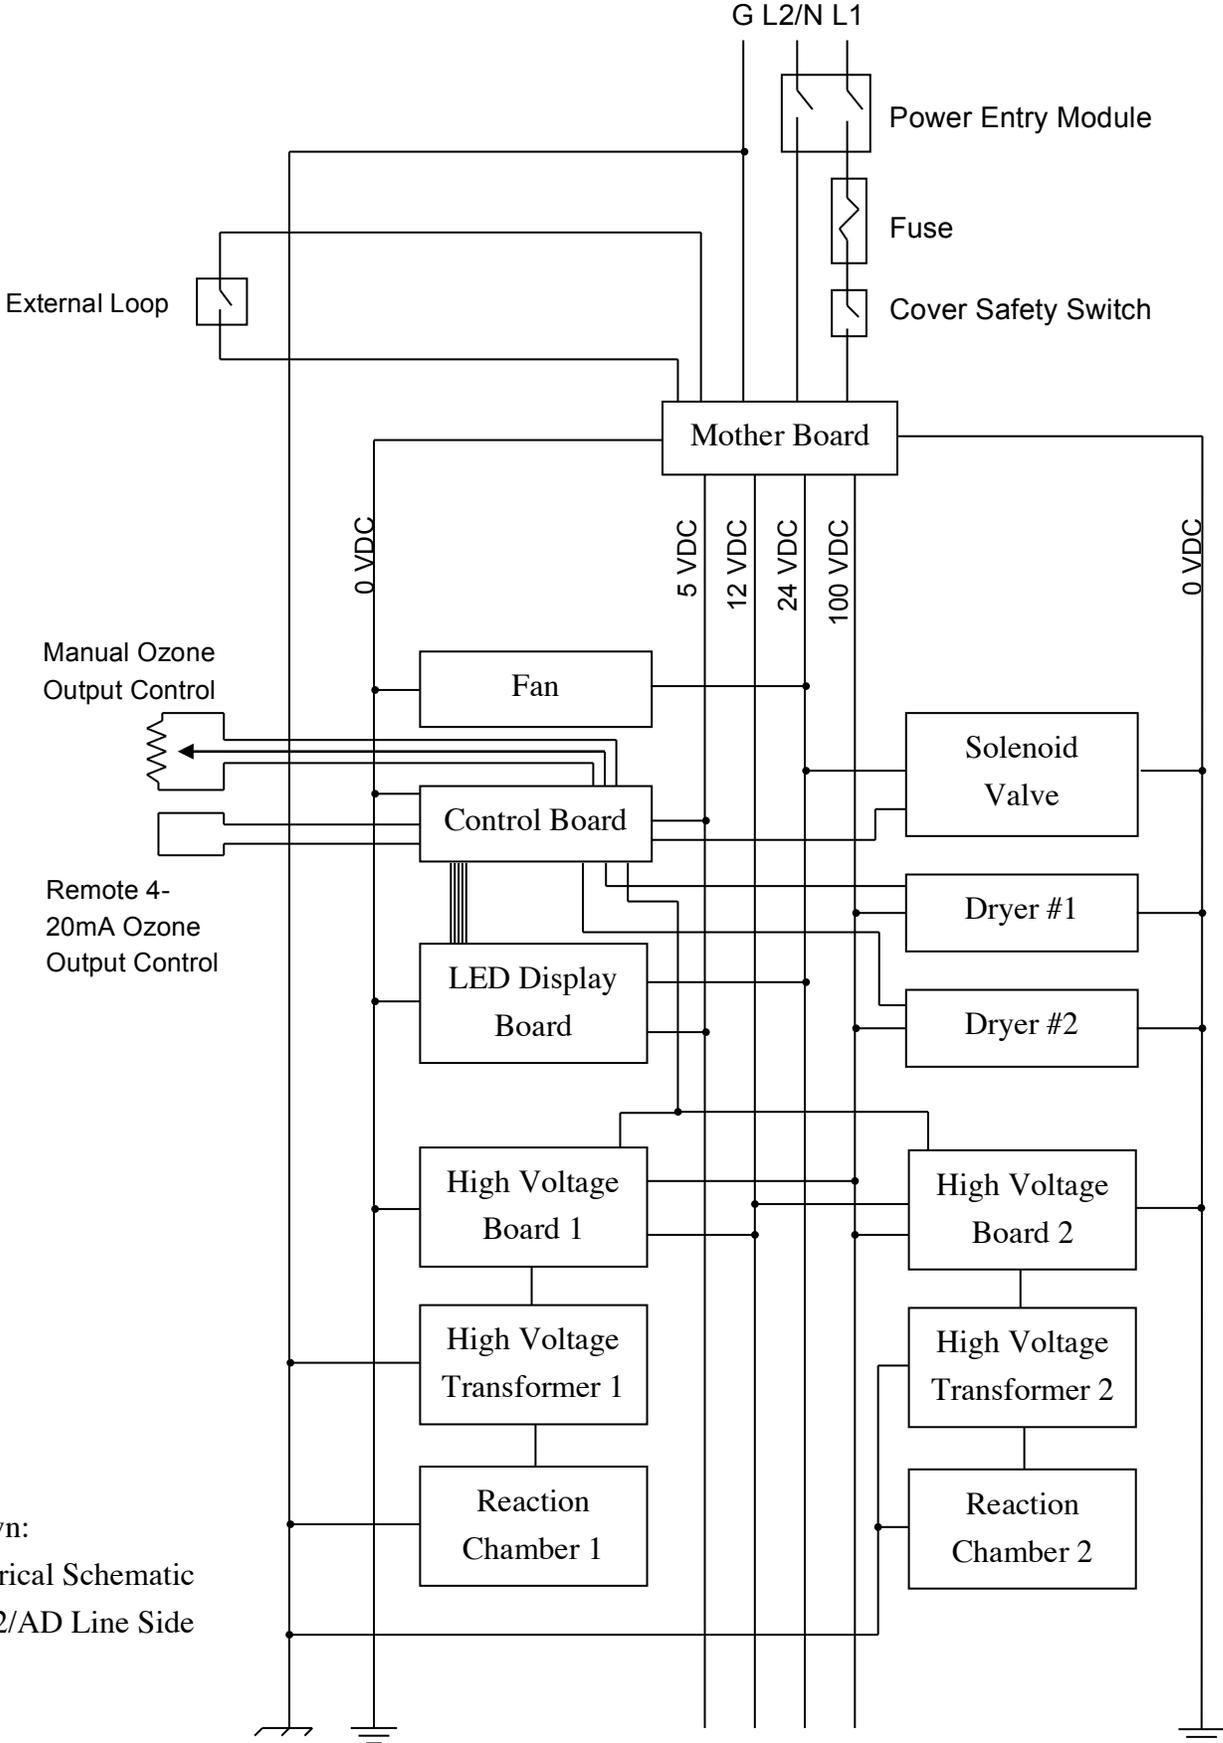

Shown:
Electrical Schematic
CD12/AD Line Side

Appendix E – Warranty Information

ClearWater Tech, LLC. Limited One-Year Warranty

Summary of the Warranty

ClearWater Tech, LLC (“CWT”) makes every effort to assure that its products meet high quality and durability standards and warrants the products it manufactures against defects in materials and workmanship for a period of one (1) year, commencing on the date of original shipment from CWT, with the following exceptions: 1) The warranty period shall begin on the installation date if the installation is performed within 90 days of the original shipment from CWT; 2) The warranty period shall begin on the date of the bill of sale to the end user if the installation date is more 90 days after the original shipment date. To validate the warranty, a warranty card, accompanied by a copy of the bill of sale, must be returned to CWT and must include the following information:

- End user name
- Complete address, including telephone number
- Date installed
- Complete model and serial number information
- Name of company from which the unit was purchased

Repairs and replacement parts provided under this warranty shall carry only the unexpired portion of this warranty or 90 days, whichever is longer.

Items Excluded from the Warranty

This warranty does not extend to any product and/or part from which the factory assigned serial number has been removed or which has been damaged or rendered defective as a result of:

- An accident, misuse, alteration or abuse
- An act of God such as flood, earthquake, hurricane, lightning or other disaster resulting only from the forces of nature
- Normal wear and tear
- Operation outside the usage parameters stated in the product user’s manual
- Use of parts not sold by CWT
- Service or unit modification not authorized by CWT
- Check valve/solenoid valve failure
- Damage which may occur during shipping
- Failure to meet service requirements as outlined in the I & O manual

Obtaining Service Under the Warranty

Any product and/or part not performing satisfactorily may be returned to CWT for evaluation. A Return Goods Authorization (RGA) number must first be obtained by either calling or writing your local authorized dealer, distributor or CWT direct, prior to shipping the product. The problem experienced with the product and/or part must be clearly described. The RGA number must appear prominently on the exterior of the shipped box(es). The product and/or part must be packaged either in its original packing material or in comparable and suitable packing material, if the original is not available. You are responsible for paying shipping charges to CWT and for any damages to the product and/or part that may occur during shipment. It is recommended that you insure the shipment for the amount you originally paid for the product and/or part.

If, after the product and/or part is returned prepaid and evaluated by CWT, it proves to be defective while under warranty, CWT will, at its election, either repair or replace the defective product and/or part and will return ship at lowest cost transportation prepaid to you except for shipments going outside the 50 states of the United States of America. If upon inspection, it is determined that there is no defect or that the damage to the product and/or part resulted from causes not within the scope of this limited warranty, then you must bear the cost of repair or replacement of damaged product and/or part and all return freight charges. Any unauthorized attempt by the end user to repair CWT manufactured products without prior permission shall void any and all warranties. For service, contact your authorized dealer or distributor or CWT direct at (805) 549-9724.

Exclusive Warranty

There is no other expressed warranty on CWT products and/or parts. Neither this warranty, nor any other warranty, expressed or implied, including any implied warranties or merchantability of fitness, shall extend beyond the warranty period. Some states do not allow limitation on how long an implied warranty lasts, so that the above limitation or exclusion may not apply to you.

Disclaimer of Incidental and Consequential Damages

No responsibility is assumed for any incidental or consequential damages; this includes any damage to another product or products resulting from such a defect. Some states do not allow the exclusion or limitation of incidental or consequential damages, so that above limitation or exclusion may not apply to you.

Legal Remedies of Purchaser

This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

THIS STATEMENT OF WARRANTY SUPERSEDES ALL OTHERS PROVIDED TO YOU AT ANY PRIOR TIME.



Clean Water Made Easy
www.cleanwaterstore.com

2806-A Soquel Ave Santa Cruz CA
95062 831.462-8500 FAX:
831.476.0832
info@cleanwaterstore.com

ClearWater Tech Skid-Mounted Ozone Systems

Call Clean Water Systems for more
information
toll-free at 1-888-600-5426



Ozone Systems

from ClearWater Tech, LLC.

800-262-0203 • 805-549-9724

850-E Capitolio Way, San Luis Obispo, CA 93401 • e-mail: sales@cwtozone.com • www.cwtozone.com

Skid-Mounted Corona Discharge

ClearWater Tech's fully-integrated skids combine Mini Series or Wall-Mount ozone technology with the same air preparation and system control options offered on our larger units. Mounted on a powder coated steel skid, for installation and operating convenience all of these systems are pre-wired, pre-plumbed and come with pneumatic connections.

Enhanced with highly efficient electronics, the six units in our skid-mounted series provide an ozone output range of 1.3 to 20 grams per hour. All are built with the same quality materials and long list of safety features for which ClearWater Tech is known.

TYPICAL APPLICATIONS

- Large Residential Pools
- Residential Well Water
- Commercial Pools
- Bottled Water
- Small Community Drinking Water
- Agriculture
- Commercial Aquariums
- Cooling Towers

M-15/02 & CD15/02

DESCRIPTION

Self-contained, single reaction chamber, skid-mounted CD ozone systems.

DIMENSIONS

72" h x 26" w x 29" d, 210 lbs

OZONE OUTPUT

M-15/02 - 7.6 grams/hr @ 7 SCFH (PSA oxygen)

CD15/02 - 10 grams/hr @ 7 SCFH (PSA oxygen)

Shown: CD15/02 with optional booster pump



P-20/02 & CD20/02

DESCRIPTION

Self-contained, dual reaction chamber, skid-mounted CD ozone systems.

DIMENSIONS

72" h x 26" w x 29" d, 225 lbs

OZONE OUTPUT

P-20/02 - 14 grams/hr @ 14 SCFH (PSA oxygen)

CD20/02 - 20 grams/hr @ 14 SCFH (PSA oxygen)

Shown: CD20/02 with optional booster pump



Skid-Mounted Corona Discharge

The POE10 and POE15 from ClearWater Tech are self-contained ozone systems built from high quality, durable components. The "plug and play" design allows for ease of installation and ability to accommodate a wide variety of applications, including residential wells, water stores and wastewater recycling systems.



ALL POE SYSTEMS INCLUDE:

- Ozone generator with air dryer
- Stainless steel pump
- Contact vessel
- Injector manifold
- Delay timer
- Backflow prevention
- Recirculation loop
- Off-gas vent
- SCFH flow meter

TYPICAL APPLICATIONS

- Residential Wells
- Water Stores
- Small Water Bottling Lines
- Waste Water Recycling Systems



POE10 & POE15

DESCRIPTION

Self-contained, single reaction chamber, skid-mounted CD ozone systems. Includes an ozone generator with air dryer, injector, booster pump, vacuum break, contact vessel and off-gas vent. Also includes a time delay control that allows for adjustable ozone dosage control.

DIMENSIONS

68" h x 29" w x 29" d, 200 lbs

OZONE OUTPUT

POE 10 - 1.3 grams/hr @ 4 SCFH (dry air)
POE 15 - 2.8 grams/hr @ 7 SCFH (dry air)

Shown: POE10

Skid-Mounted Specifications Chart

	M-15/02	CD15/02	P-20/02	CD20/02	POE10	POE15
Amp. draw @ 120V/60Hz	N/A	N/A	N/A	N/A	8.6 amps	14.2 amps
Amp. draw @ 240V/60Hz	4.8 amps	4.8 amps	5.4 amps	5.4 amps	N/A	N/A
Air preparation	PSA Oxygen	PSA Oxygen	PSA Oxygen	PSA Oxygen	Dry Air	Dry Air
g/h @ SCFH	7.6 @ 7	10 @ 7	14 @ 14	20 @ 14	1.3 @ 4	2.8 @ 7
Percent by weight	3%	4%	3%	4%	1%	1%
High temperature limit	Yes	Yes	Yes	Yes	Yes	Yes
Vacuum switch protected	Yes	Yes	Yes	Yes	No	No
Dry contact control	No	Yes	No	Yes	Yes	Yes
ORP control	Yes	Yes	Yes	Yes	No	No
4-20 mA control	No	Yes	No	Yes	Yes	No
Manual variable ozone output	No	Yes	No	Yes	Yes	No
Water inlet connection	N/A	N/A	N/A	N/A	1" fpt	1" fpt
Water outlet connection	N/A	N/A	N/A	N/A	1" fpt	1" fpt

CAUTION: The inside of the cabinet of the ozone generator has **HIGH VOLTAGE**, , thus caution should be exercised locating it.

CAUTION: DO NOT install generator in a **POTENTIALLY EXPLOSIVE ATMOSPHERE**. This ozone generator is **NOT INTRINSICALLY SAFE OR EXPLOSION PROOF**

CAUTION: The ozone generator unit should be located in a dry and clean, area, not subject to water sprays or extreme temperatures. The surrounding atmosphere should be free of corrosive gases and/or chemical vapors that can cause corrosion of internal and external components of the ozonation system. The temperature of the room where the ozonation equipment is located should be maintained between 40 and 100 degrees F.

CAUTION: High concentration of ozone may be irritating or toxic depending upon exposure. Avoid direct and extended contact with ozone. Make certain that the output of the ozone generator is not discharged into areas where personnel, or objects sensitive to ozone, are present. Check piping for leaks before placing the ozone generator into operation.

Description

This ozone generator, utilizes one cell constructed of PVC, glass and stainless steel in conjunction with an advanced solid state medium frequency inverter to produce ozone in an efficient and trouble-free manner.

Specifications

Listed below, are mechanical, electrical, operating characteristics and safety interlocks of the PCI Model G-7 ozone generator.

Mechanical

Dimensions: 18" Length, 16" Width, 6" Height

Weight: 40 pounds

Plumbing Connections: See installation document.

Electrical

Input Power: 110 V or 208/230 V, 60 Hz, 1 amp, single phase, plus ground

Ambient Temperature:	40 to 100 degrees F
Ozone Output Control:	Manual or Automatic (4-20 ma)
Safety Interlocks	
High Temperature:	Ozone cell temperature is excessive.
Door Ajar:	A door or panel on the ozone generator is open or ajar.
Low Water Flow:	The water flow is insufficient through the ozone generator.
Low Air Flow:	The feed gas flow is insufficient through the ozone generator.
External Interlock:	External source of shutdown.

Major Components

This section will describe the major components of the ozone generating system.

Ozone Cell (1) [Model Q100-S]

The cell consists of a stainless steel electrode and a silver plated glass electrode which are surrounded by a PVC shroud. There is cooling water inside the stainless steel electrode and dielectric oil between the glass electrode and the PVC shroud to cool the cell. The feedstock gas passes through a gap between the stainless steel and glass electrodes. A high voltage, medium frequency, discharge through the feedstock gas causes a portion of the oxygen in the gas to be converted to ozone.

Instruments

Air Flowmeter - The flowmeter measures the airflow rate to the ozone generator cells. . See pressure correction factors to determine actual flow rate through the ozone generator.

Pressure Gauge The pressure gauge measures the air pressure in the ozone generator cell. The gauge has a range of 0-30 PSIG.

Controls

Control Mode - Four-Position Selector Switch

ON - The ozone generator is on.

OFF - The ozone generator is off.

REMOTE ON/OFF – Ozone generator ready for operation from a remote source (dry contact).

AIR PREP – Places unit on stand-by, ready to be turned on.

Manual/Auto Output Control – Two-position switch. Manual activates the manual output control. Auto allows the unit to receive a 4 to 20 milliamp signal to control the output.

Manual Ozone Output Control - Potentiometer - Controls the ozone output by varying the DC current to the inverter. The ozone output is proportional to the current.

Internal Interlock Sensors

High Temperature: Temperature switch. Ozone cell temperature is excessive.

Door Ajar: Micro switch. A door or panel on the ozone generator is open or ajar.

Low Air Flow: In line flow switch. The gas flow is insufficient in the ozone generator.

Low Water Flow: In line flow switch. The water flow is insufficient in the ozone generator.

Indicator Lights

Ozonator On - Green Light - Indicates that the ozone generator is producing ozone.

Alarm lights

Remote ON/OFF Yellow

High Temperature: Red

Door Ajar: Red

Low Water Flow: Red

Low Air Flow: Red

Installation

General - The ozone generator can be installed by qualified plumbers and electricians following the procedures in this section. Do not start up system until the installation has been checked thoroughly.

Location of Units

The ozone generator unit should be located in a dry and clean, well ventilated, area, not subject to water sprays or extreme temperatures. The inside of the cabinet of the ozone generator has **HIGH VOLTAGE**, thus caution should be exercised locating it. **DO NOT** install generator in a **POTENTIALLY EXPLOSIVE ATMOSPHERE**. This ozone generator is **NOT INTRINSICALLY SAFE OR EXPLOSION PROOF** rated. The surrounding atmosphere should be free of corrosive gases and/or chemical vapors, which can cause corrosion of internal and external components of the ozonation system. The temperature of the room where the ozonation equipment is located should be maintained between 40 and 100 degrees F.

A minimum of two feet clearance is required around the ozone generator. This is necessary to insure safe and easy access for all items, which may require maintenance or repair.

Plumbing Connections at the Ozone Generator

Ozone Out:	1/2" Female NPT, 304 stainless steel
Air In:	1/2" Female NPT, Brass
Water In:	3/4" Female NPT, Brass
Water Out:	3/4" Female NPT, Brass

Electrical Connections

Main Power Connections - The main breaker power connection is TBD The actual load of the generator is 1 amp. All wiring must be done in accordance with local electrical codes

Initial System Check and Operation

General - Do not proceed with the instructions in this section until the system has been checked out thoroughly to insure proper installation.

Initial Start Up

The controls on the ozone generator should be in the following position:

Main Power Circuit Breaker - OFF
Rotary Selector Switch - OFF

Turn on cooling water supply. Set the cooling water flow to the correct level.

Switch generator Main Power Circuit breaker to "ON."

Locate the ozone flow valve located in the lower right hand side of the generator. This valve is used to 1) Throttle the airflow through the ozone cell and 2) Set the backpressure of the ozone cell at 15 psig.

Open the stainless steel ozone flow valve completely.

Turn on the feedstock gas supply. Set the gas flow and pressure to the correct levels.

The ozone generator operates most efficiently when the pressure at the ozone cell is 15 PSIG. Operating the generator at higher or lower pressures can lead to generator failures.

CAUTION: High concentration of ozone may be irritating or toxic depending upon exposure. Avoid direct and extended contact with ozone. Make certain that the output of the ozone generator is not discharged into areas where personnel or objects sensitive to ozone are present..

Turn the On/Off Switch to the "ON" position.

When the Control Mode switch is placed "ON" the following occurs:

Green Generator "ON" light will go on.

Five to 10 (5 - 10) seconds after the ON light goes on, the ozone generator starts producing ozone.

Set ozone production rate with the Manual Ozone Output Control